




Montageanleitung Adapterplatte

TRIUMPH SPEED TRIPLE 1050 S (EURO 4) 2018 - 2020



Lieferumfang

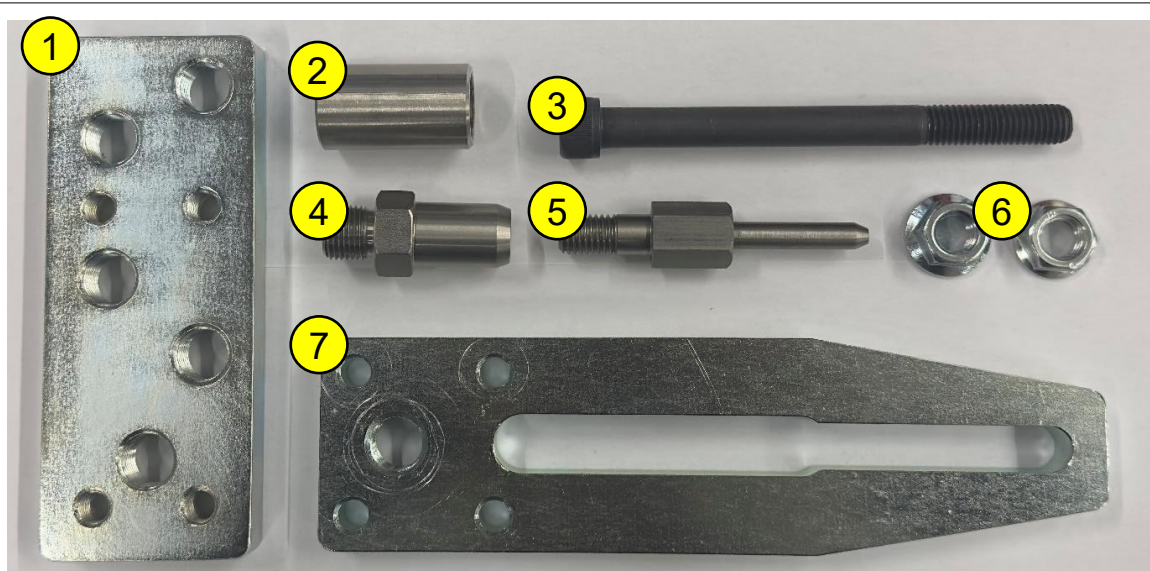

Hilfestellung:

Lege dir alle Teile so auf einem Blatt Papier aus und schreibe dir die Nummern auf das Blatt.


Die Nummern benötigst du im Nachgang, um die Teile zuzuordnen.

Pos.	Beschreibung	Anzahl
①	Erweiterte Grundplatte	1
②	Rahmenhülse oben	1
③	Zylinderkopfschraube M12x135	1
④	Pin oben	1
⑤	Pin unten	1
⑥	Schnormutter M12	2
⑦	Adapterplatte	1



Montage der Rahmenhülse am Motorrad

Aufnahmepunkte am Motorrad

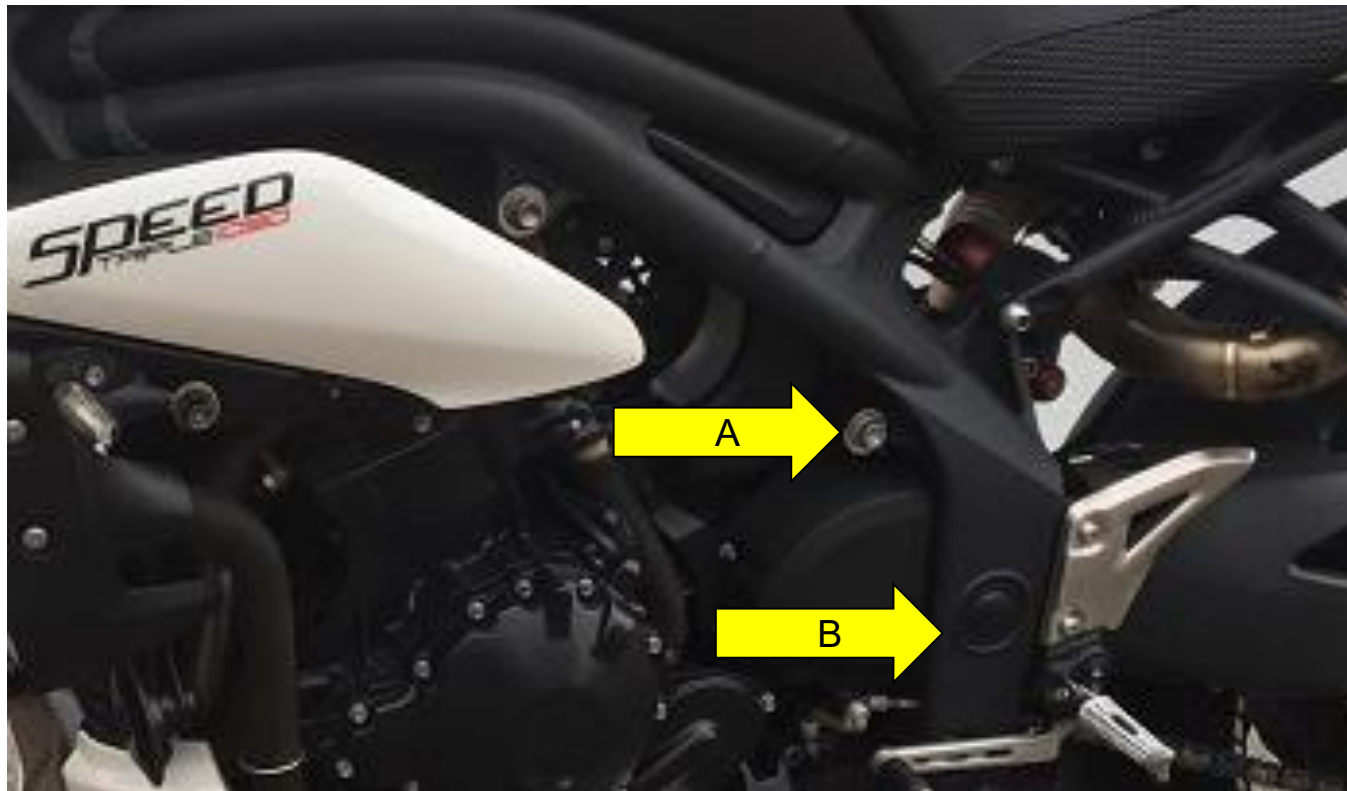

Punkt A:

Hier wird die obere
Rahmenhülse ②
montiert.

Punkt B:

Hier wird der untere
Pin ⑤ eingeführt.

*Bild zeigt anderes Motorrad (Aufnahmepunkte/Prinzip ähnlich)



Montage der Rahmenhülse am Motorrad

Schraube vom Rahmen entfernen





Punkt A:
Die Schraube und Mutter
entfernen.

*Bild zeigt anderes Motorrad (Aufnahmepunkte/Prinzip ähnlich)



Montage der Rahmenhülse am Motorrad

Rahmenhülse am Motorrad befestigen

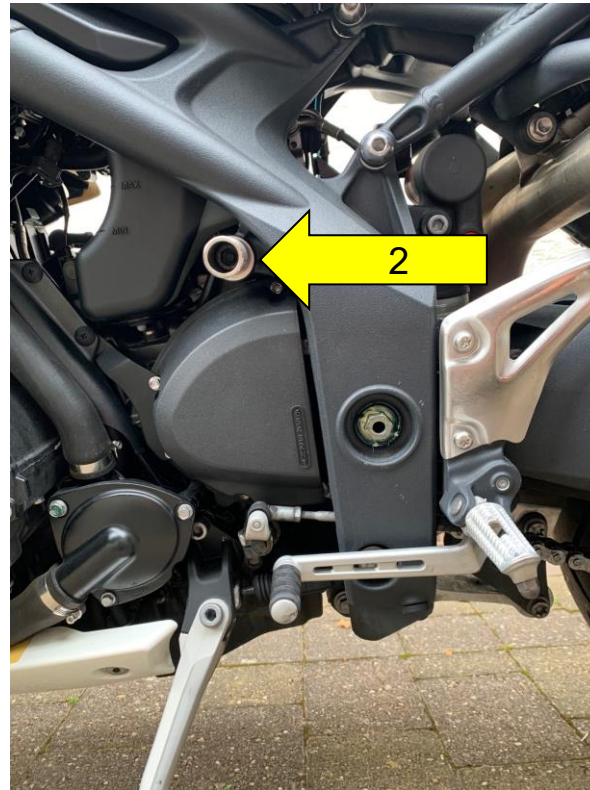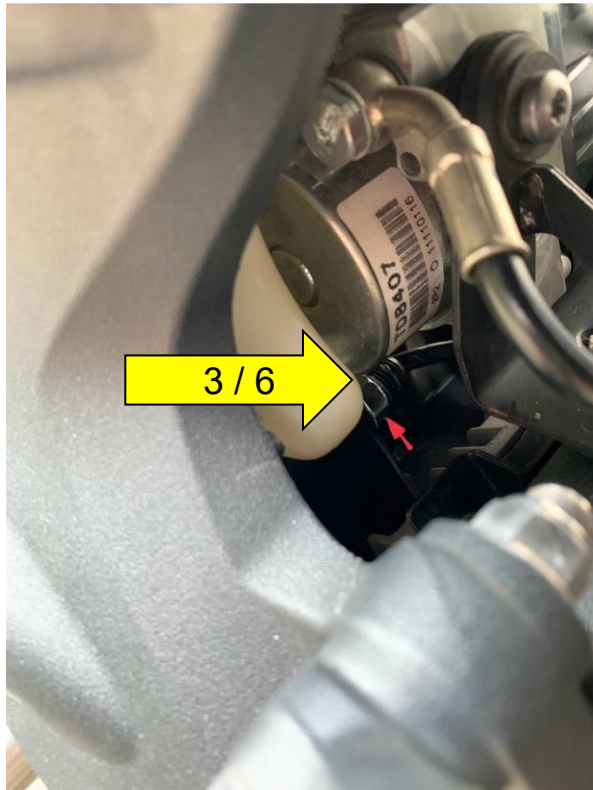

Zylinderkopfschraube **3** und eine Schnorrmutter **6** nutzen, um die Rahmenbuchse **2** am Rahmen zu befestigen


WICHTIG:
Anzugsmoment der Schraube beachten. Das Anzugsmoment finden Sie im Werkstatthandbuch des Herstellers.

*Bild zeigt anderes Motorrad (Aufnahmepunkte/Prinzip ähnlich)



Montage Adapterplatte

Erweiterte Grundplatte verbauen

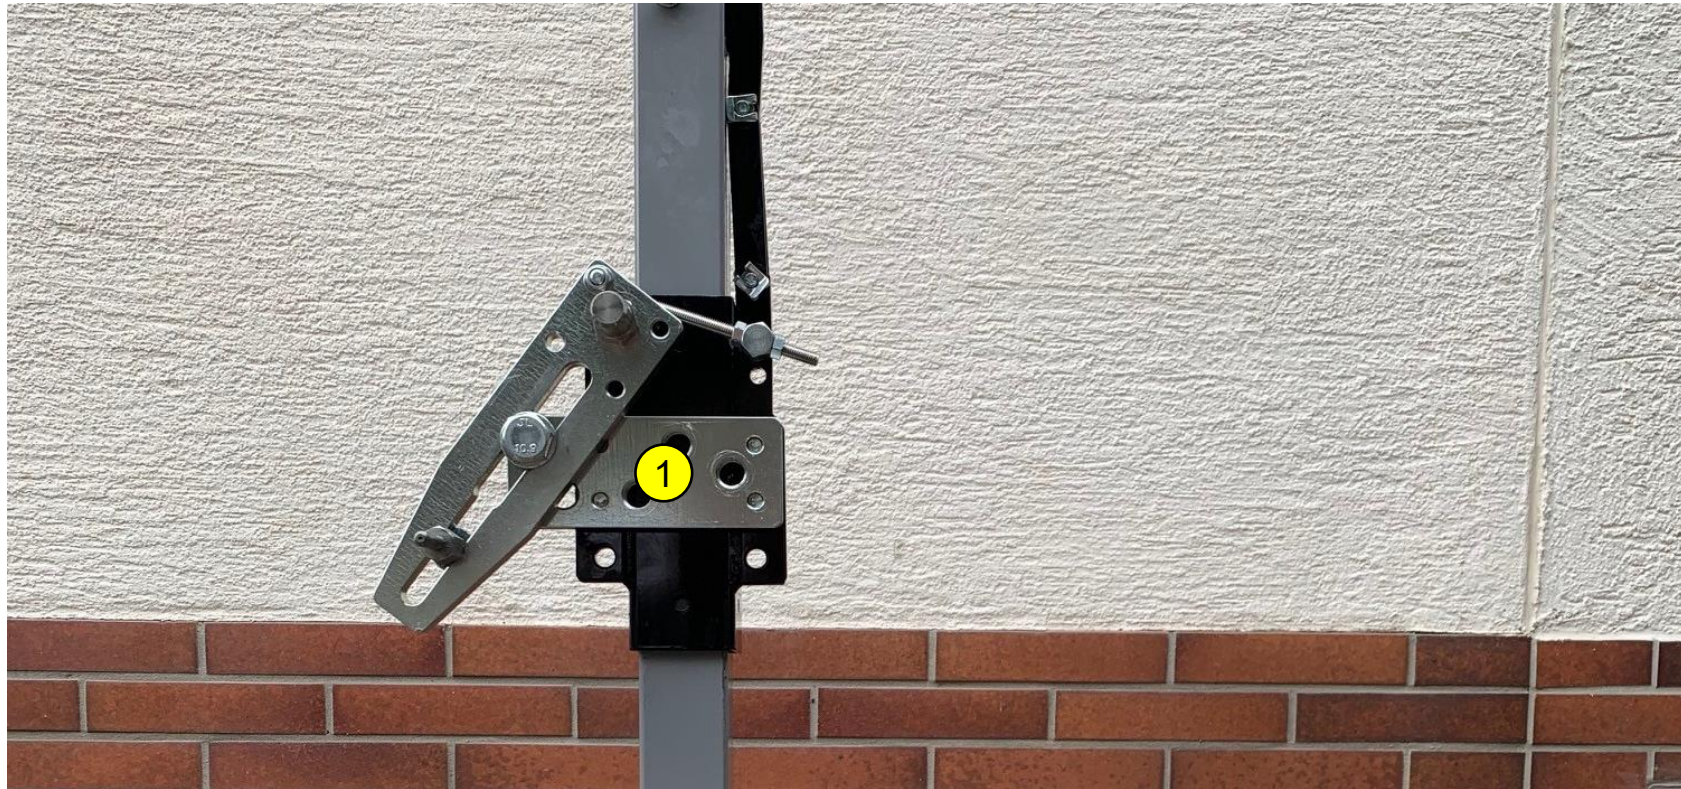


Anstelle der standardmäßig mitgelieferten Grundplatte, die erweiterte Grundplatte **1** am Zentralständer verbauen.



Montage Adapterplatte

Adapterplatte vormontieren

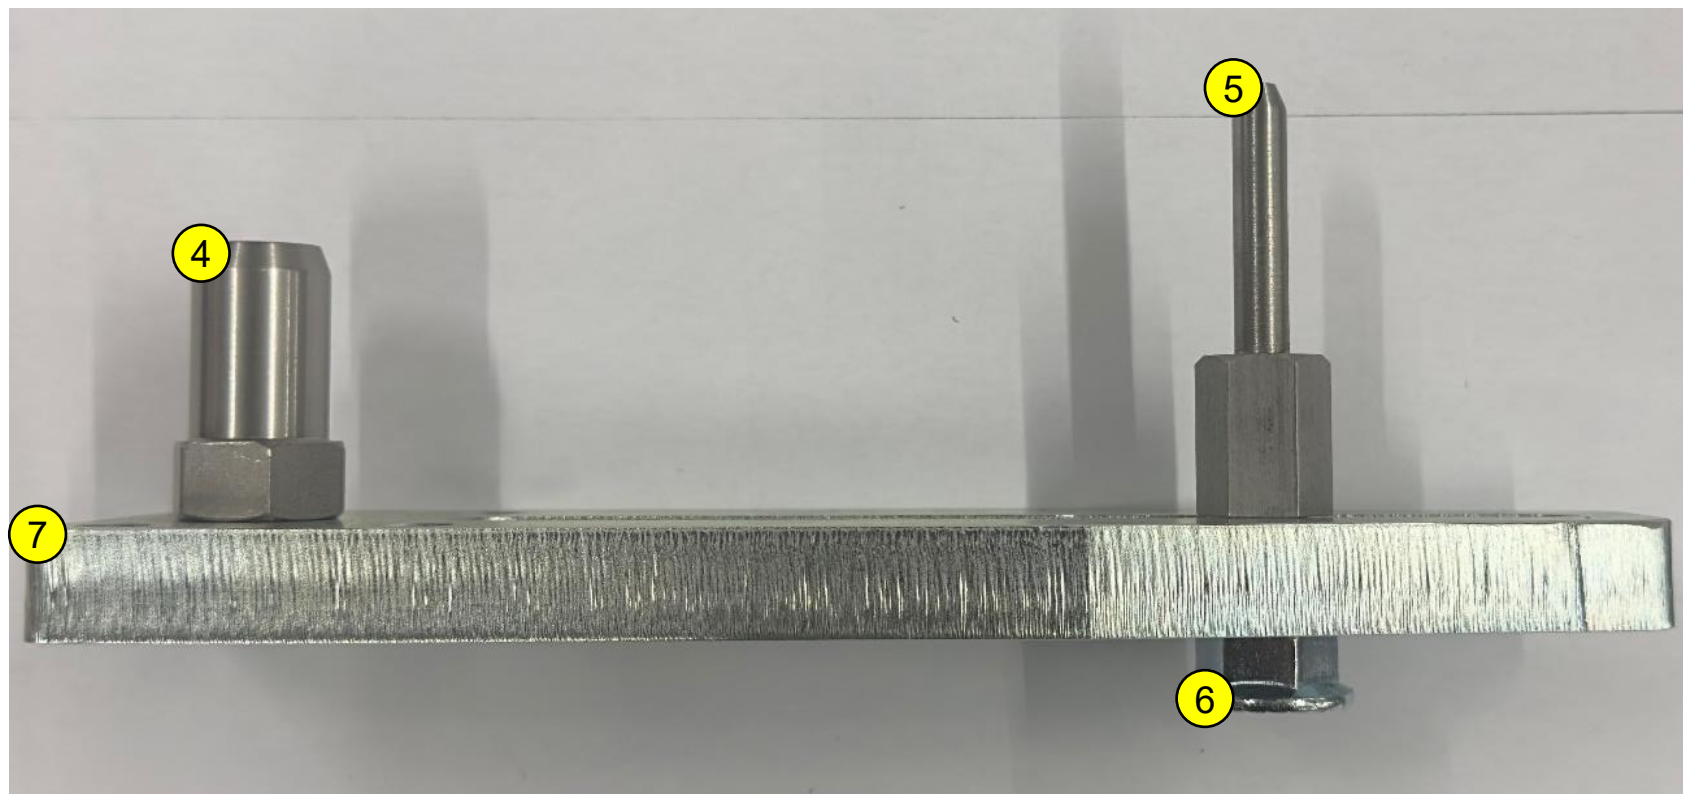


1. Den oberen Pin **4** an der Adapterplatte **7** verschrauben.
2. Den unteren Pin **5** mit einer Schnorrmutter **6** an der Adapterplatte verschrauben, aber nicht festziehen.



Montage Adapterplatte

Adapterplatte fixieren

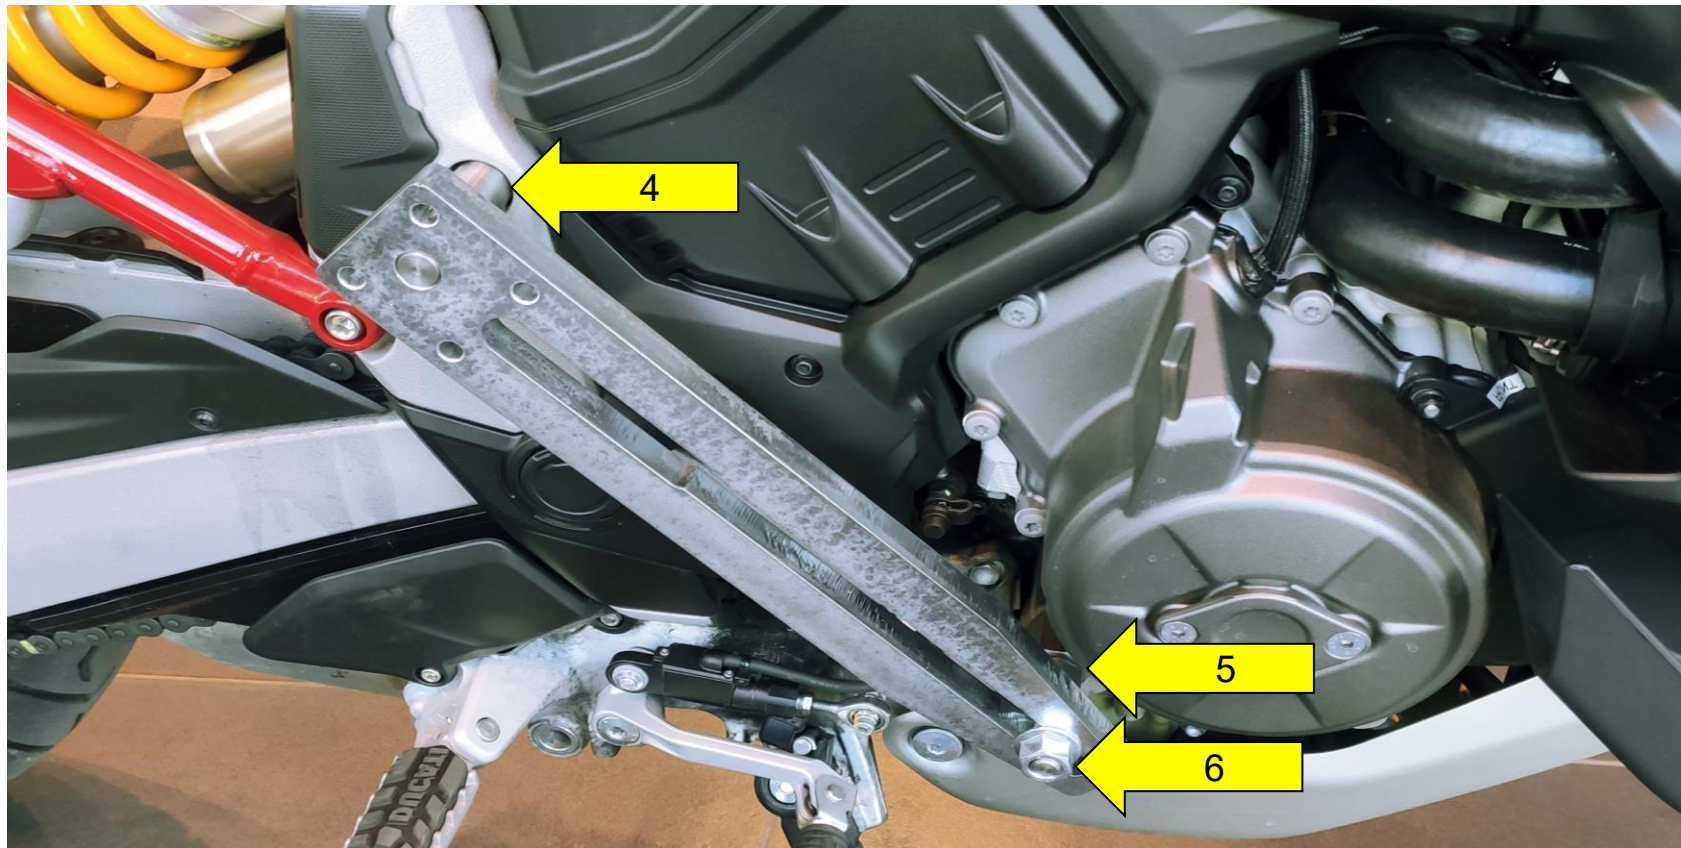


1. Die Adapterplatte mit dem oberen Pin ④ an das Motorrad stecken und den unteren Pin ⑤ ausrichten.
2. Den unteren Pin ⑤ mit der Schnormutter ⑥ festziehen.

*Bild zeigt anderes Motorrad (Aufnahmepunkte/Prinzip ähnlich)



Montage Adapterplatte

Adapterplatte am Zentralständer verschrauben

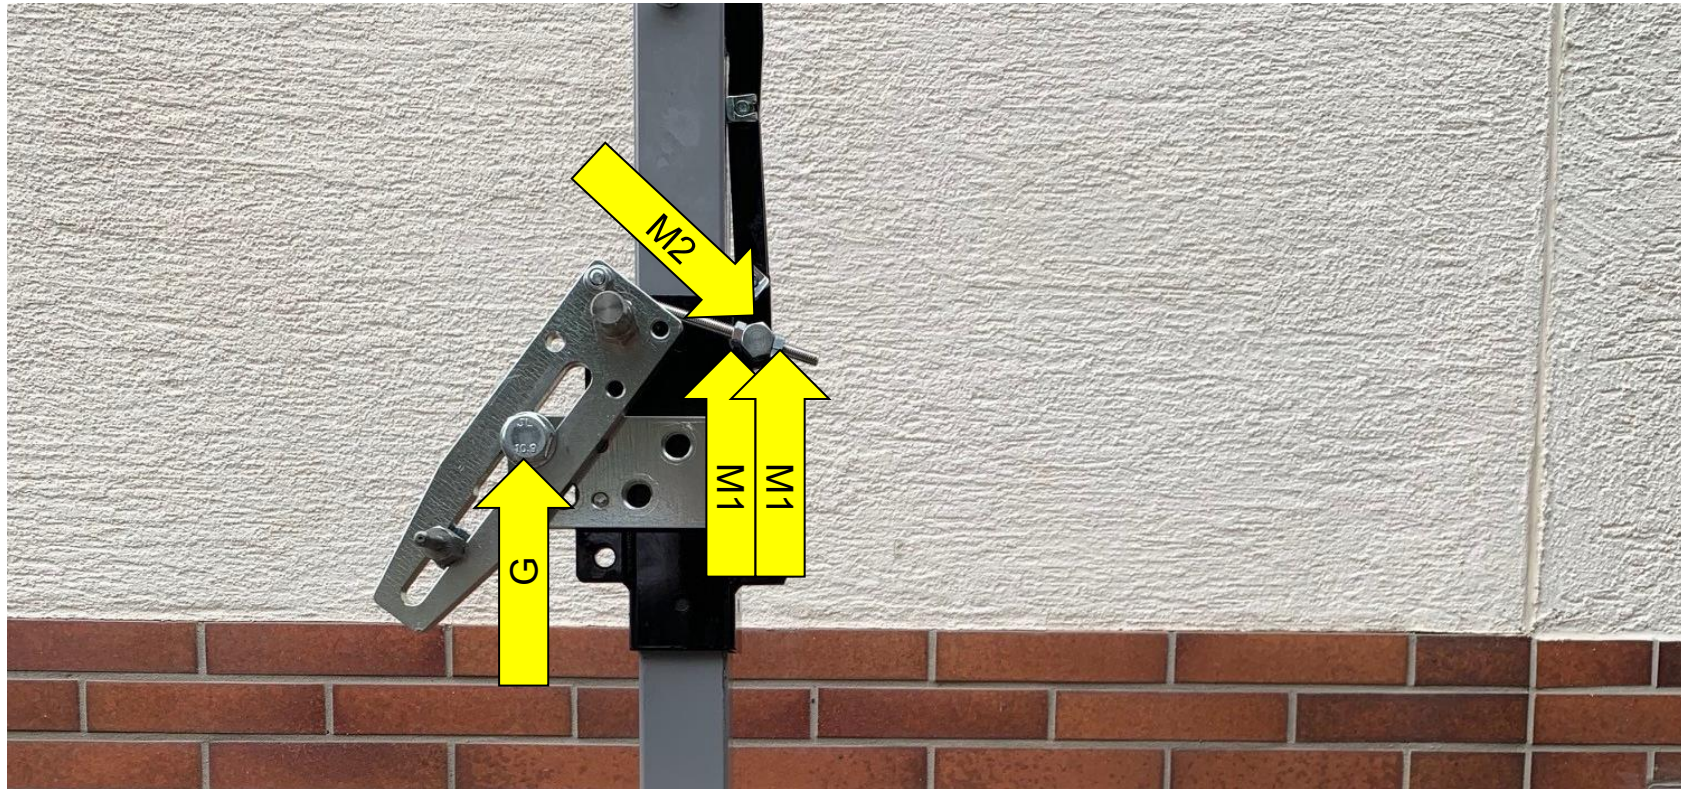

1. Neigungsverstellung an der Adapterplatte montieren. Dazu beide Muttern **M1** sowie die Mutter auf der Rückseite **M2** lösen. Die Neigung entspricht $\sim 36^\circ$.
2. Adapterplatte an der Grundplatte **G** verschrauben, aber nicht anziehen, damit sich die Adapterplatte frei bewegen lässt.



Montage Adapterplatte

Adapterplatte ausrichten (1/3)



*Bild zeigt anderes Motorrad (Aufnahmepunkte/Prinzip ähnlich)

1. Den Zentralständer neben dem Motorrad und möglichst weit vorne positionieren. Dabei auf Kollision mit der Fußraste und dem Schalthebel achten.
2. Die beiden Pins einführen.
3. Die Adapterplatte an der Grundplatte verschrauben und anziehen (180 Nm).



Montage Adapterplatte

Adapterplatte ausrichten (2/3)



*Bild zeigt anderes Motorrad (Aufnahmepunkte/Prinzip ähnlich)

4. Alle Schrauben an der Neigungsverstellung und an der Adapterplatte anziehen.

WICHTIG:

Bei manchen Modellen wird der Ständer auf den Rollen, welche sich auf dem Boden befinden eingerollt.



Montage Adapterplatte

Adapterplatte ausrichten (3/3)



*Bild zeigt anderes Motorrad (Aufnahmepunkte/Prinzip ähnlich)


Bei einigen Modellen ist der Angriffspunkt des Zentralständers sehr dezentral in Richtung Hinterrad orientiert, weshalb das Gewicht des Motorrads nach vorne neigt.

Dies führt dazu, dass der Zentralständer eine größere negative Neigungsvoreinstellung benötigt und deshalb mit der Fußspitze leicht angehoben werden muss.



Hinweise

Erweiterte Grundplatte

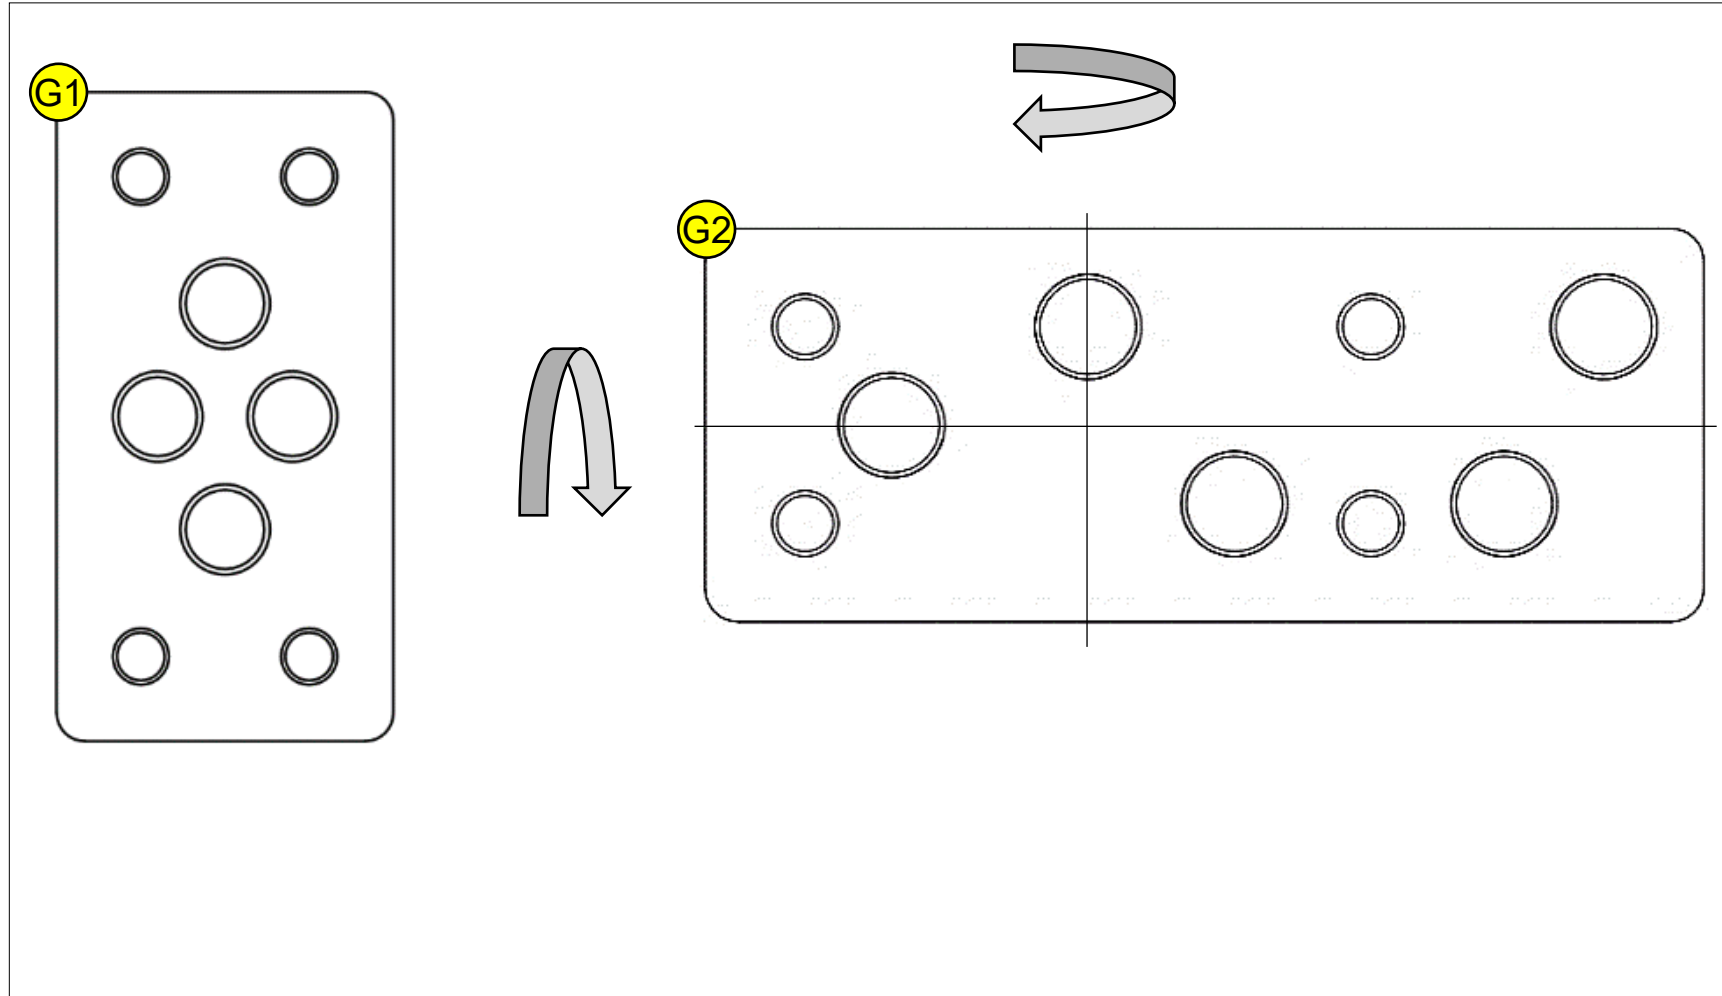

Für eine optimale Ausrichtung der Adapterplatte auf der Grundplatte **G1**, ist eine erweiterte Grundplatte **G2** erhältlich.
Die erweiterte Grundplatte kann jeweils um 180° gedreht werden.



Hinweise

Neigungseinstellung

Damit das Motorrad mit beiden Rädern gleich vom Boden abhebt, muss die Neigung eingestellt werden.

Die Anleitung für die Neigungseinstellung finden Sie auf unserer Homepage.




User manual Adapter plate

TRIUMPH SPEED TRIPLE 1050 S (EURO 4) 2018 - 2020



Scope of delivery

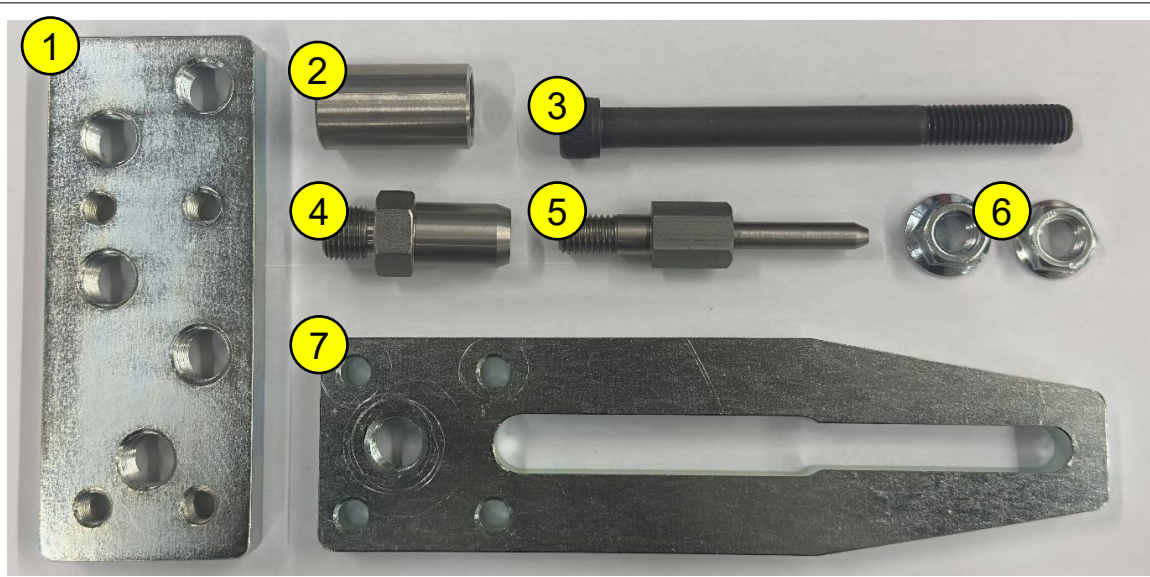

Help:

Lay out all the pieces on a sheet of paper and write the numbers on the sheet.


You will need the numbers to assign the pieces afterwards.

Pos.	Description	Quantity
①	Extended base plate	1
②	Upper frame sleeve	1
③	Cylinder head screw M12x135	1
④	Upper pin	1
⑤	Lower pin	1
⑥	Cord nut M12	2
⑦	Adapter plate	1



Fitting the frame sleeve to the motorcycle

Mounting points on the motorcycle

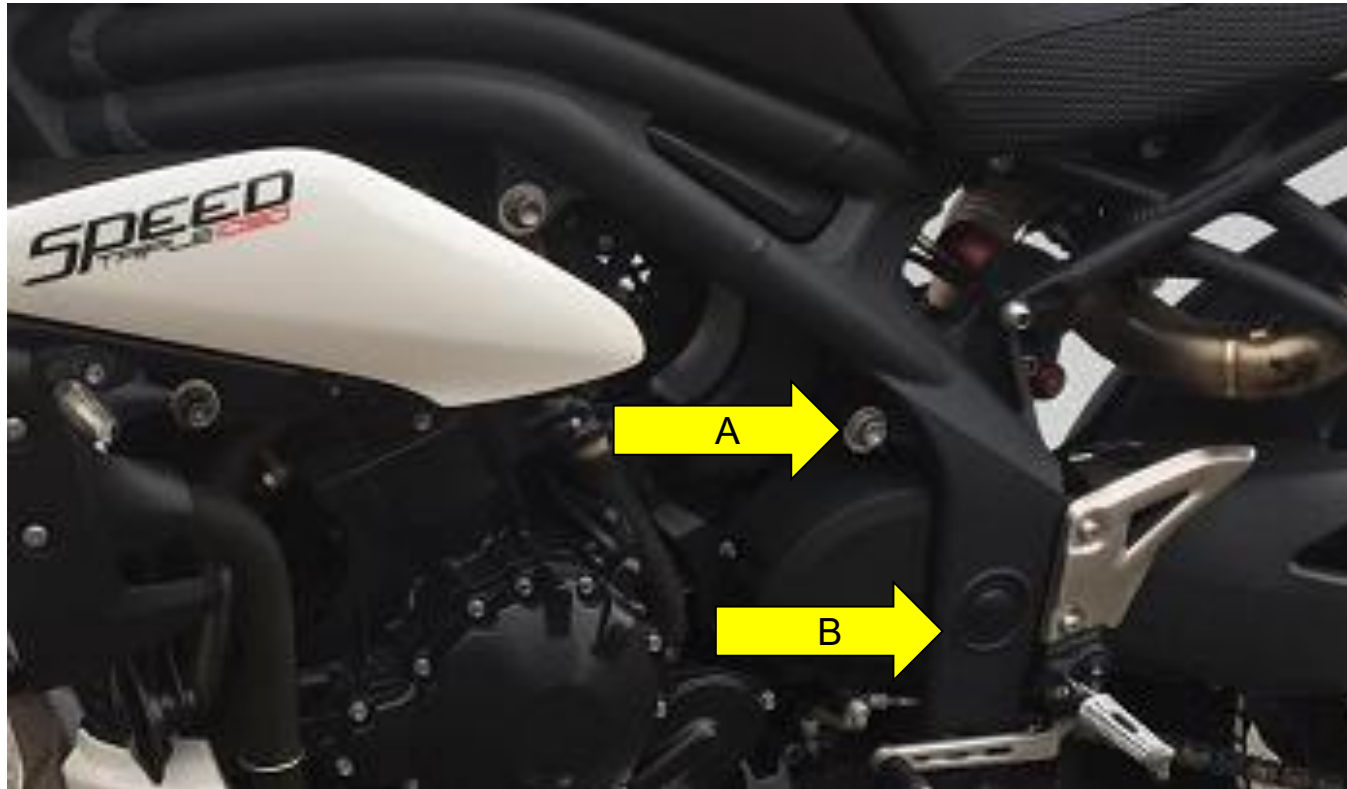

Point A:

The upper frame sleeve ② is fitted here.

Point B:

The lower pin ⑤ is inserted here.

*Image shows a different motorcycle (mounting points/principle similar)



Fitting the frame sleeve to the motorcycle

Remove the screw from the frame




Point A:
Remove the screw and
the nut.

*Image shows a different motorcycle (mounting points/principle similar)



Fitting the frame sleeve to the motorcycle

Attach the frame sleeve to the motorcycle

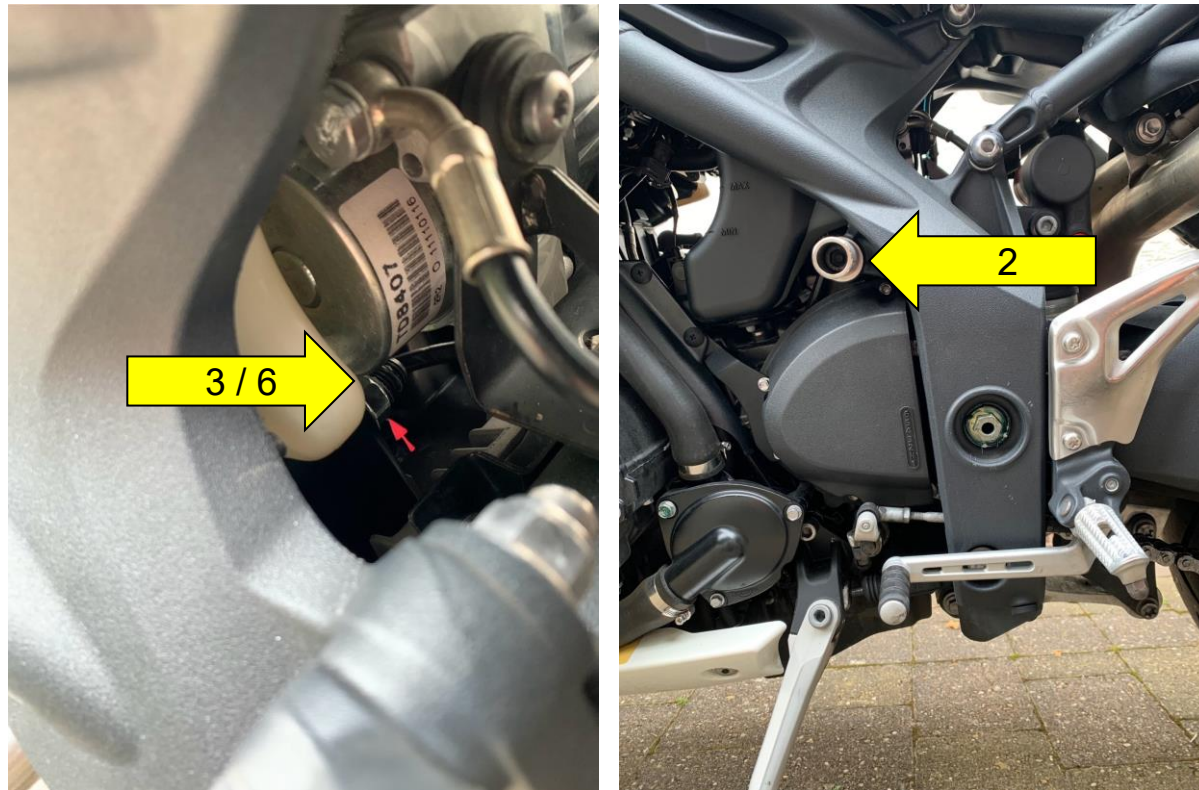

Use the cylinder head screw **3** and a cord nut **6** to screw on the upper frame sleeve **2**.

IMPORTANT:

Note the tightening torque of the screw.


The tightening torque can be found in the manufacturer's workshop manual.

*Image shows a different motorcycle (mounting points/principle similar)



Mounting adapter plate

Assemble extended base plate

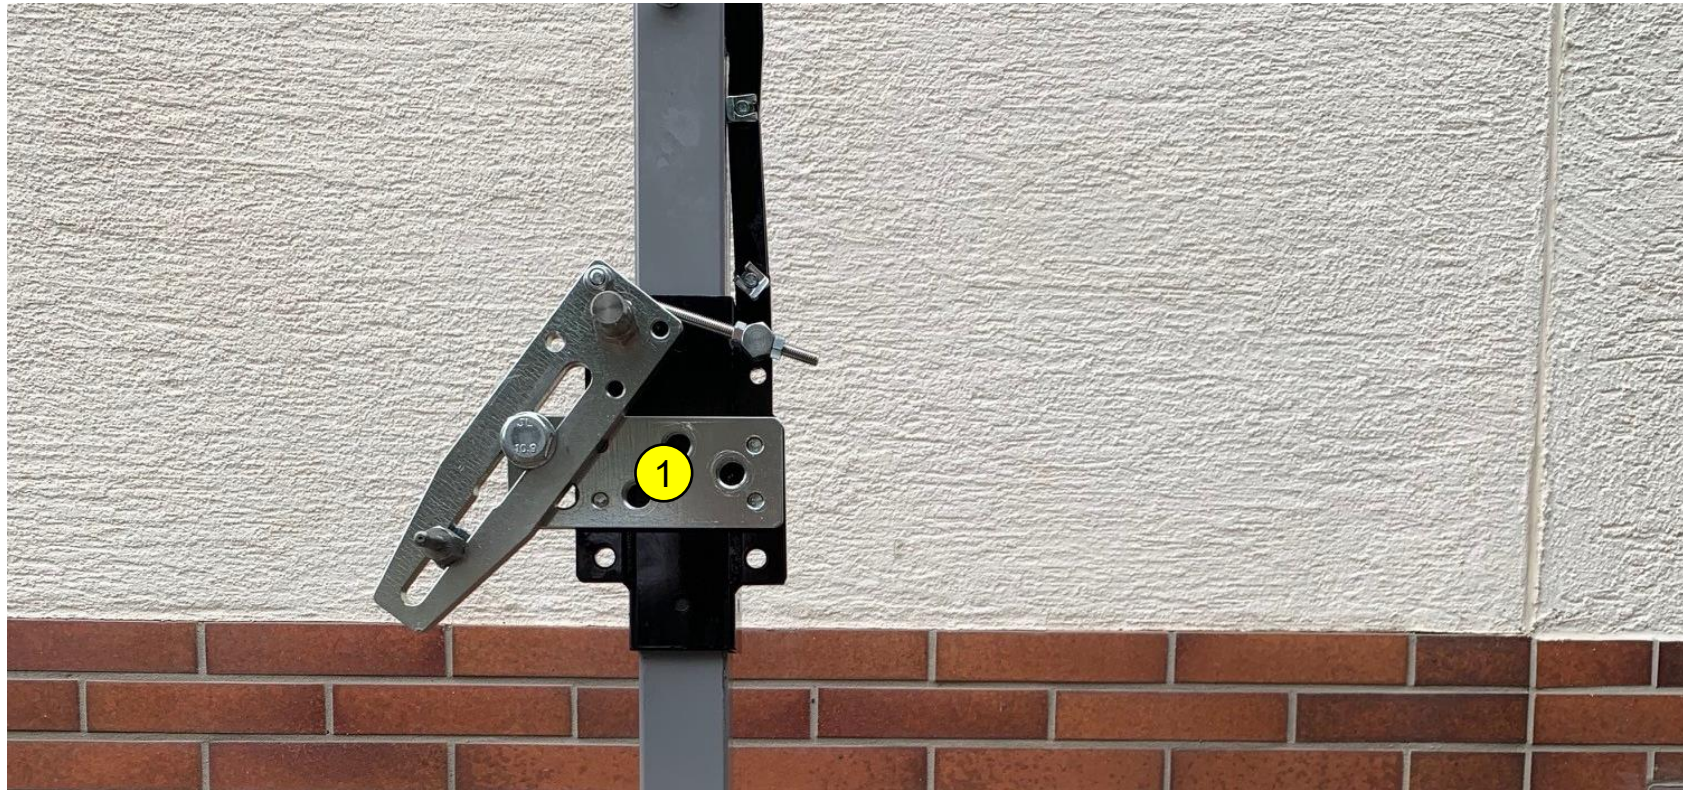


Instead of the standard base plate that comes with the center stand, install the extended base plate **1** on the center stand.



Mounting adapter plate

Pre-assemble the adapter plate

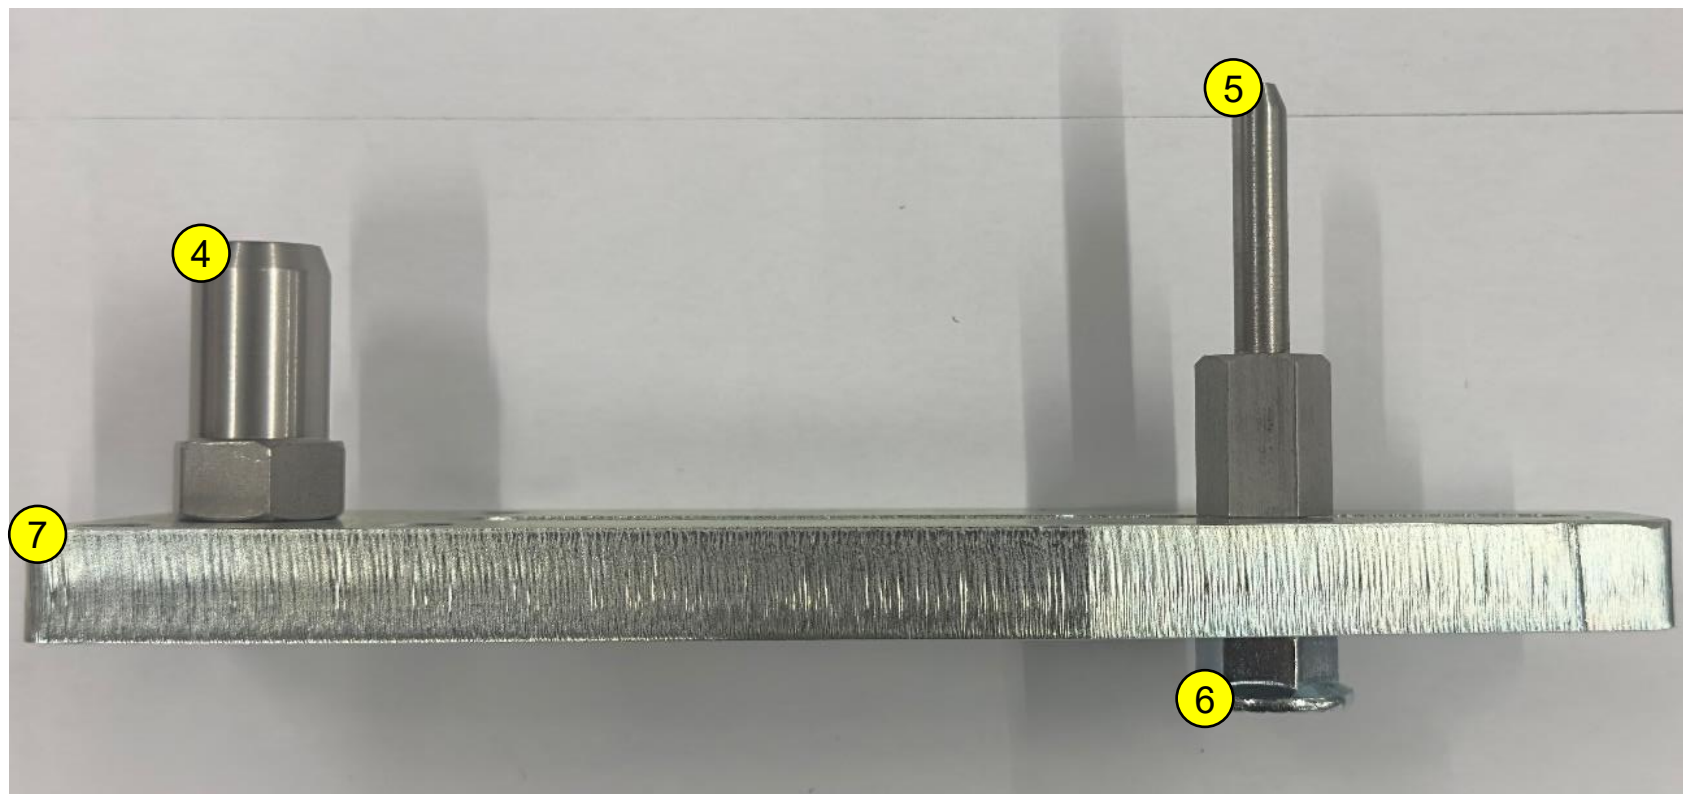


1. Screw the upper pin **4** to the adapter plate **7**.
2. Screw the lower pin **5** to the adapter plate using a cord nut **6**, but do not tighten it.



Mounting adapter plate

Fix the adapter plate

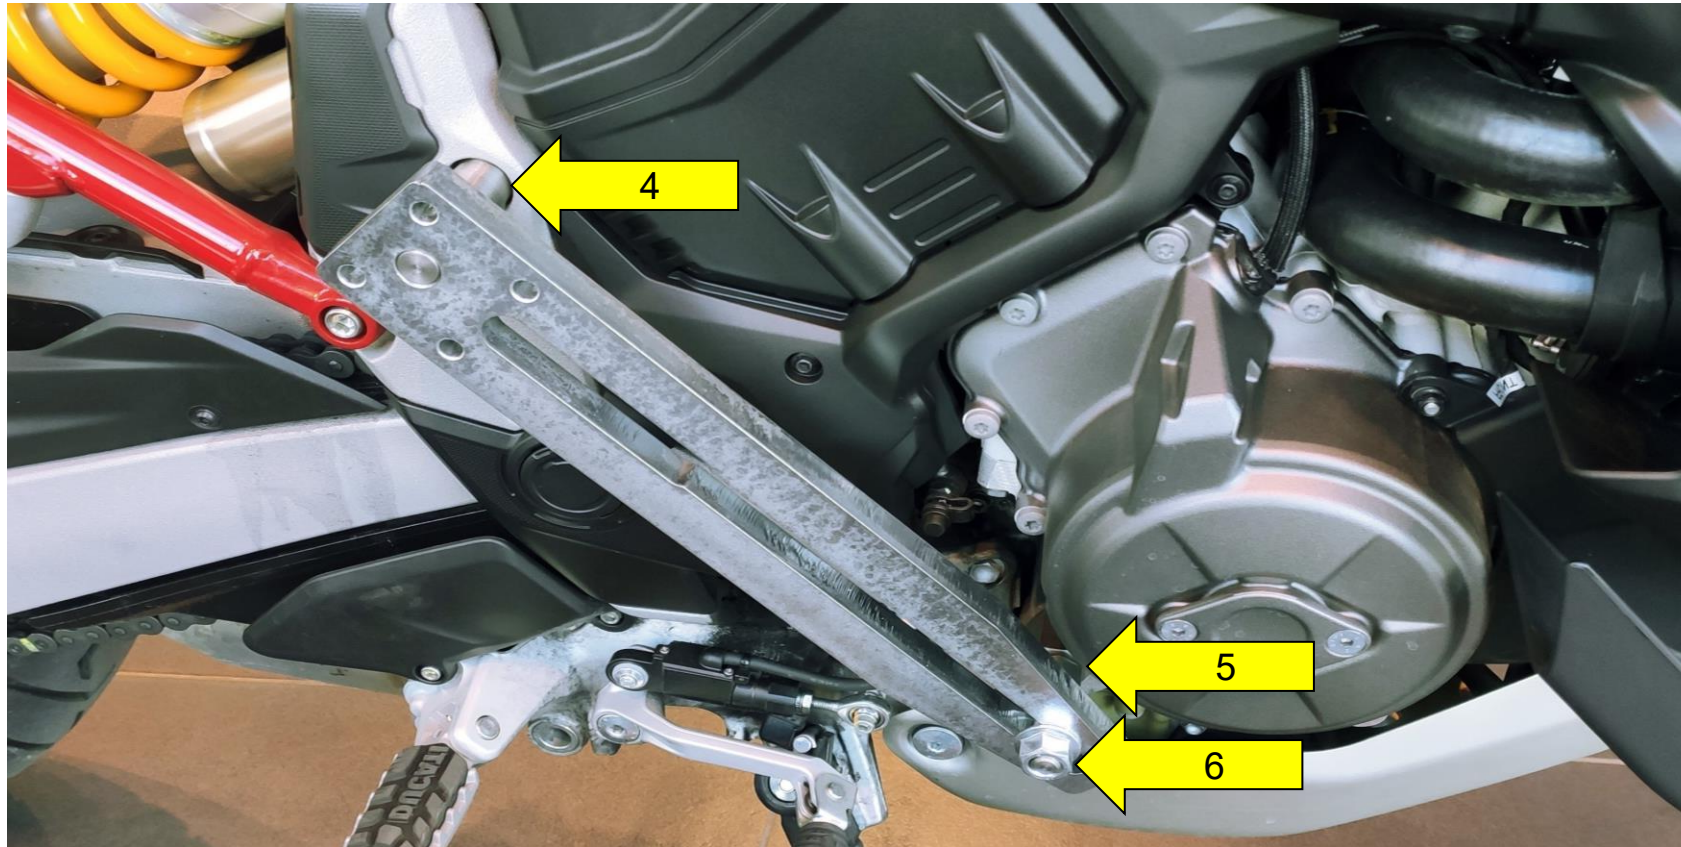


1. Attach the adapter plate to the motorcycle with the upper pin ④ and align the lower pin ⑤.
2. Tighten the lower pin ⑤ with the cord nut ⑥.

*Image shows a different motorcycle (mounting points/principle similar)



Mounting adapter plate

Screw the adapter plate to the center stand

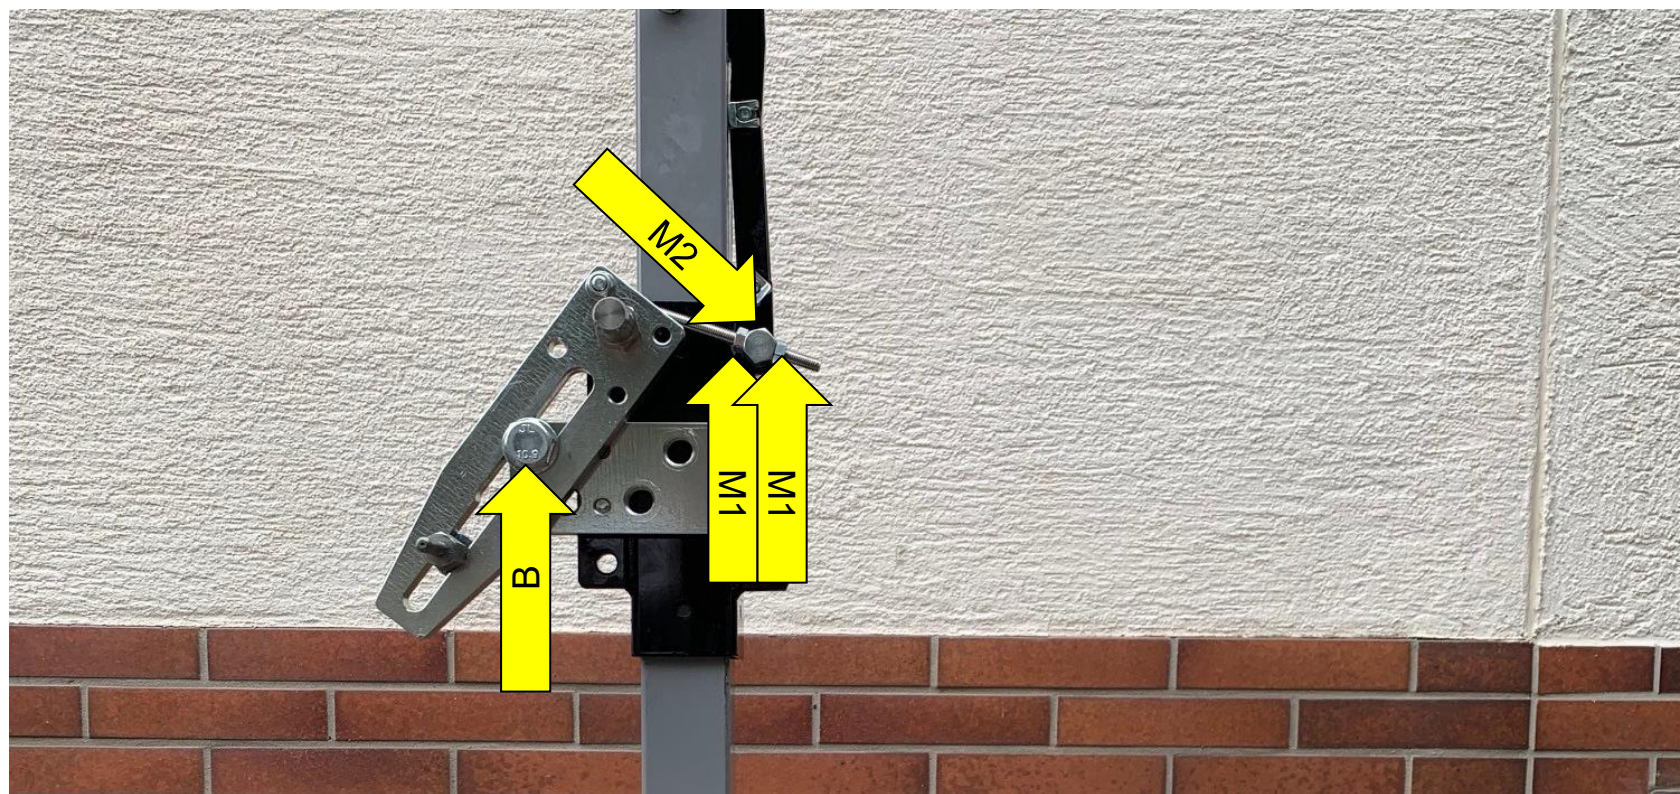

1. Mount the tilt adjustment on the adapter plate. To do this, loosen both nuts **M1** and the nut on the rear **M2**. The angle is $\sim 36^\circ$.
2. Screw the adapter plate **B** the base plate **B**, but do not tighten the screws so that the adapter plate can move freely.



Mounting adapter plate

Align the adapter plate (1/3)



*Image shows a different motorcycle (mounting points/principle similar)

1. Position the center stand next to the motorcycle and as far forward as possible. Watch out for collisions with the footrest and gearshift.
2. Insert the two pins.
3. Screw the adapter plate to the base plate and tighten (180 Nm).



Mounting adapter plate

Align the adapter plate (2/3)



*Image shows a different motorcycle (mounting points/principle similar)

4. Tighten all screws on the tilt adjustment and on the adapter plate.

IMPORTANT:

On some models, the stand is rolled up on the rollers, which are located on the ground.



Mounting adapter plate

Align the adapter plate (3/3)



*Image shows a different motorcycle (mounting points/principle similar)


On some models, the point of contact of the center stand is very decentralized towards the rear wheel, which is why the weight of the motorcycle leans forward.

This means that the center stand requires a larger negative tilt presetting and must therefore be lifted slightly with the tip of the foot.



Hints

Extended base plate

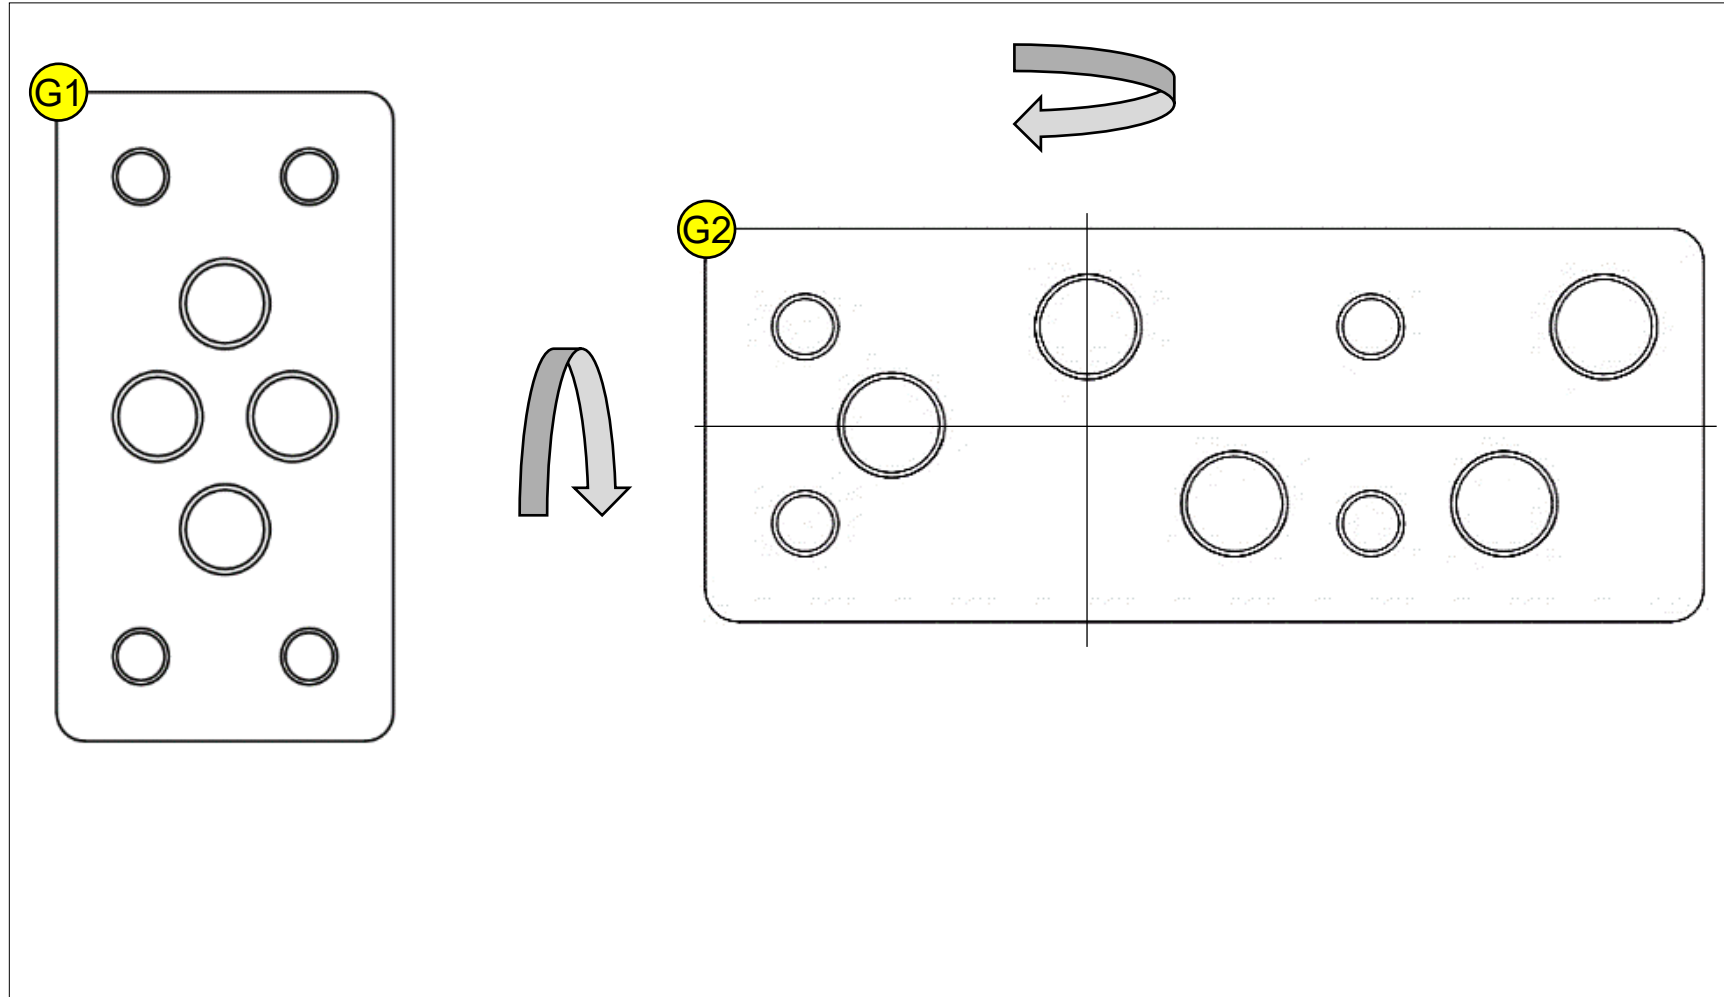

For optimum alignment of the adapter plate on the base plate **G1**, an extended base plate **G2** is available; the extended base plate can be rotated by 180°.



Hints

Tilt adjustment

The tilt must be adjusted so that both wheels lift off the ground at the same time.

The instructions for adjusting the tilt can be found on our homepage.