Montageanleitung Adapterplatte

KAWASAKI Z 1000 SX/TOURER 2011 - 2013

Lieferumfang

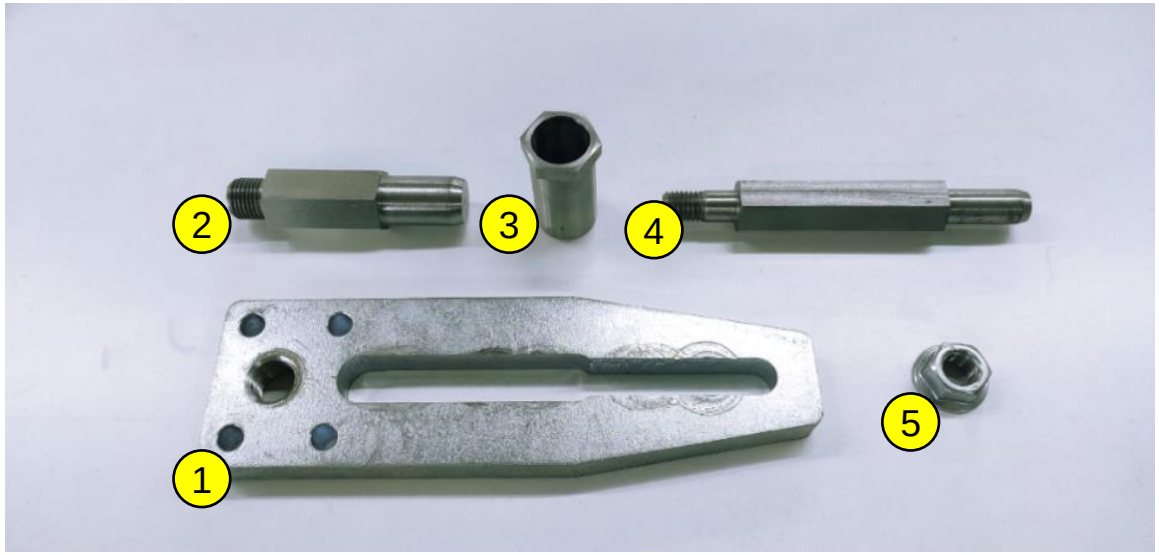

Hilfestellung:

Lege dir alle Teile so auf einem Blatt Papier aus und schreibe dir die Nummern auf das Blatt.

Die Nummern benötigst du im Nachgang, um die Teile zuzuordnen.

Pos.	Beschreibung	Anzahl
1	Adapterplatte	1
2	Pin oben	1
3	Rahmenhülse	1
4	Pin unten	1
5	Schnorrmutter M12	1

Montage der Rahmenhülse am Motorrad

Aufnahmepunkte am Motorrad

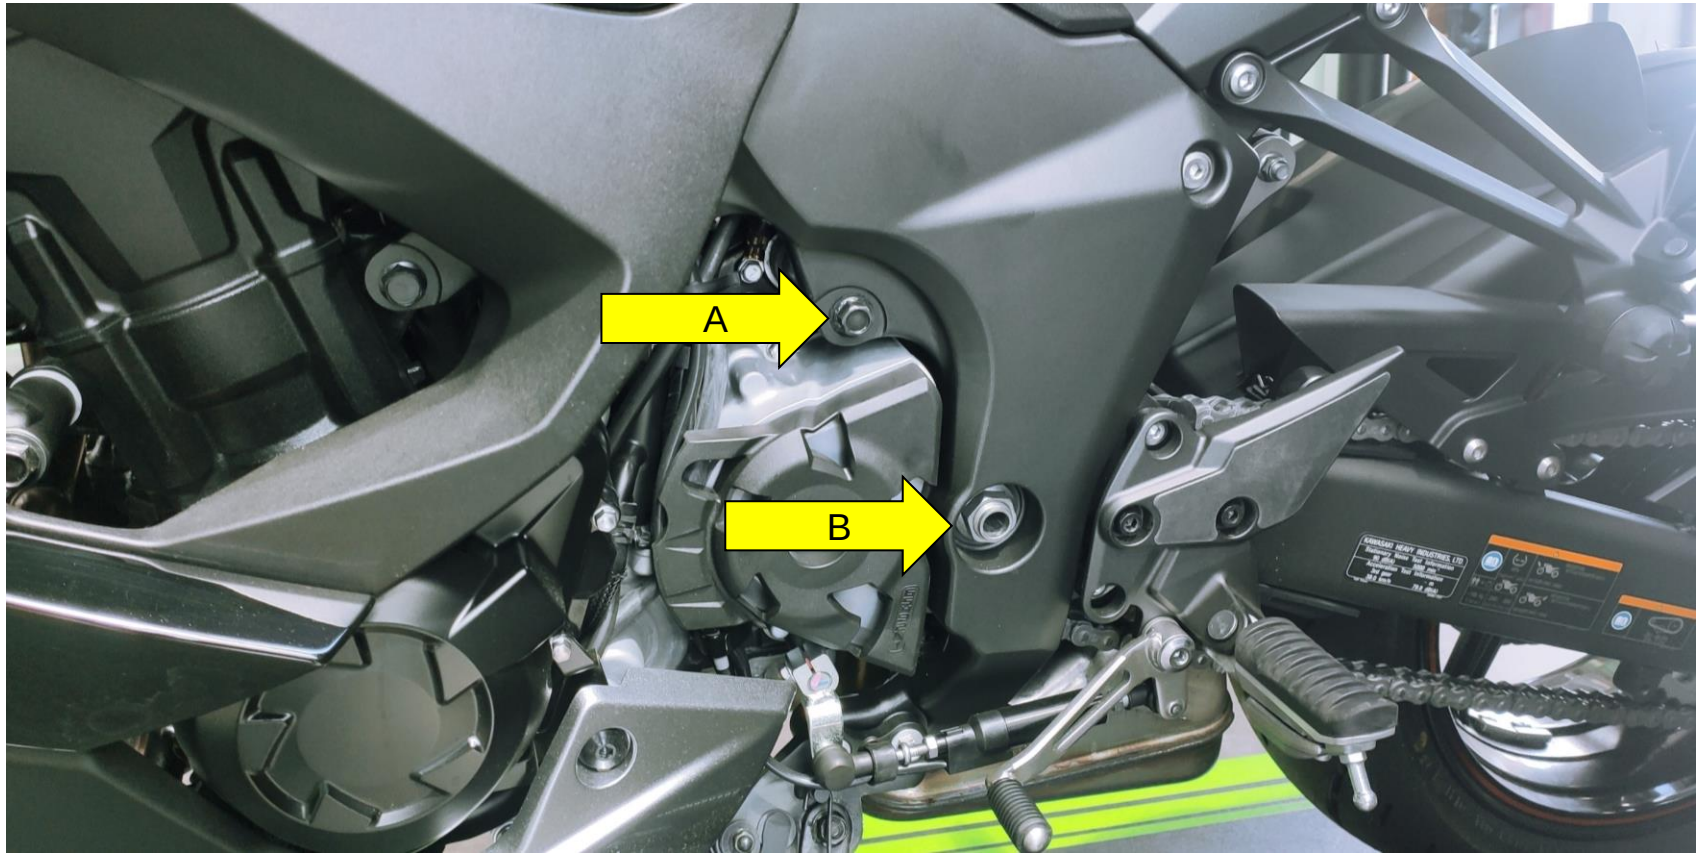

*Bild zeigt anderes Motorrad (Aufnahmepunkte/Prinzip ähnlich)

Punkt A:

Hier wird die Rahmenhülse (3) montiert.

Punkt B:

Hier wird der untere Pin (4) eingeführt.

Montage der Rahmenhülse am Motorrad

Schraube vom Rahmen entfernen

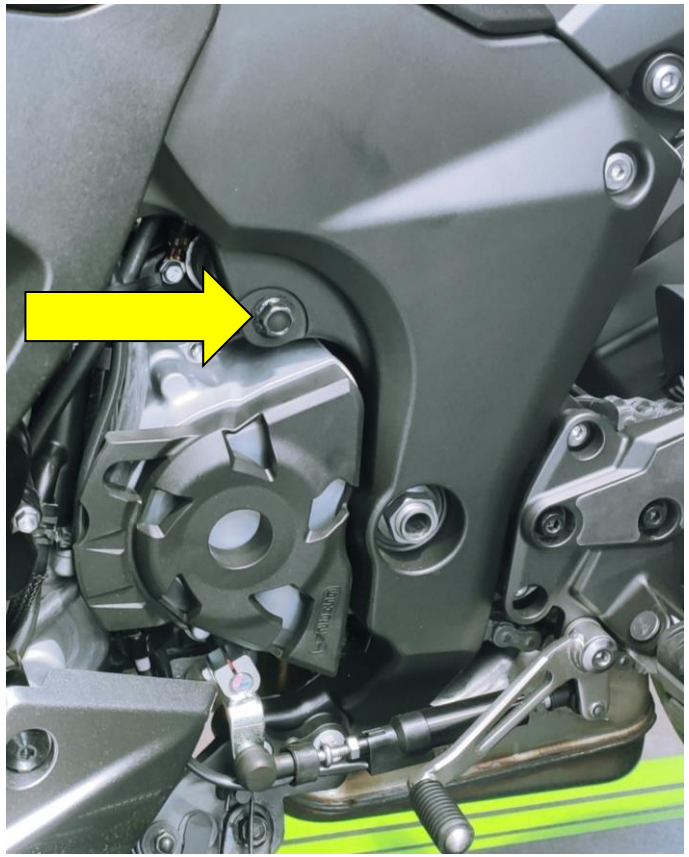

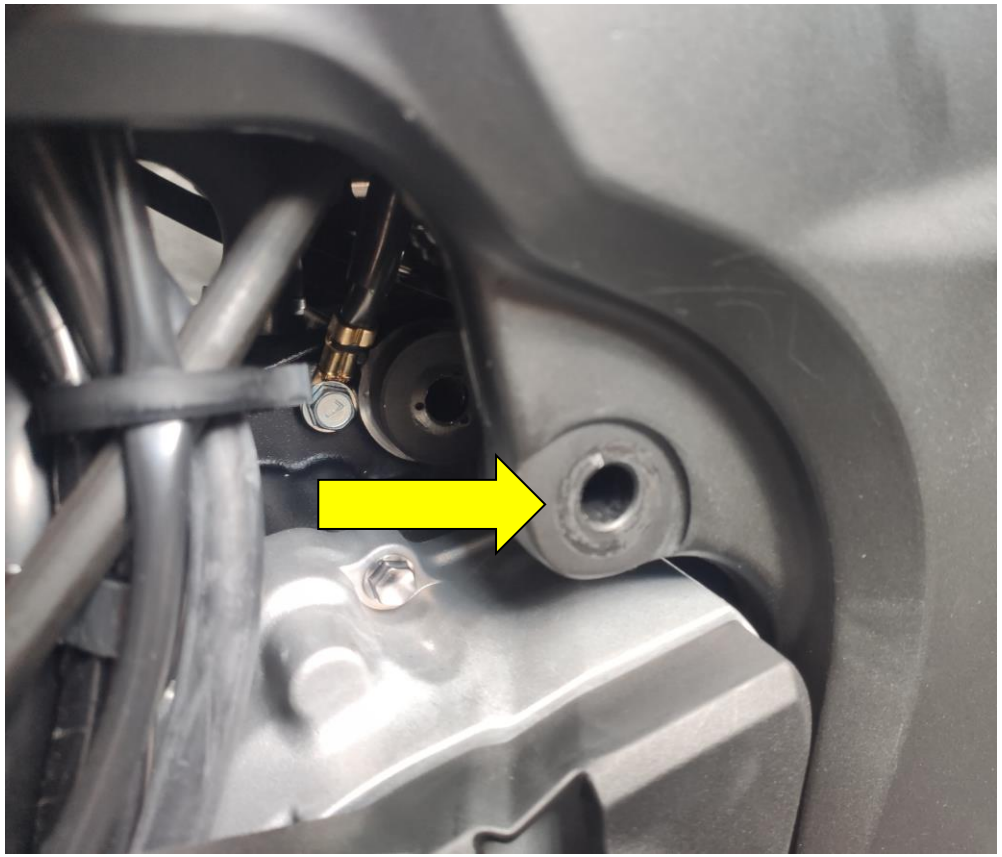

*Bild zeigt anderes Motorrad (Aufnahmepunkte/Prinzip ähnlich)

Löse die Mutter des Motorbolzens und entferne diesen, dann muss der Bolzen gedreht und von der anderen Seite in den Rahmen eingeführt werden, um die Rahmenhülse zu befestigen.

→Die Rahmenhülse wird später die entfernte Mutter ersetzen

→Mutter für den Rückbau aufbewahren

Montage der Rahmenhülse am Motorrad

Rahmenhülse am Motorrad befestigen

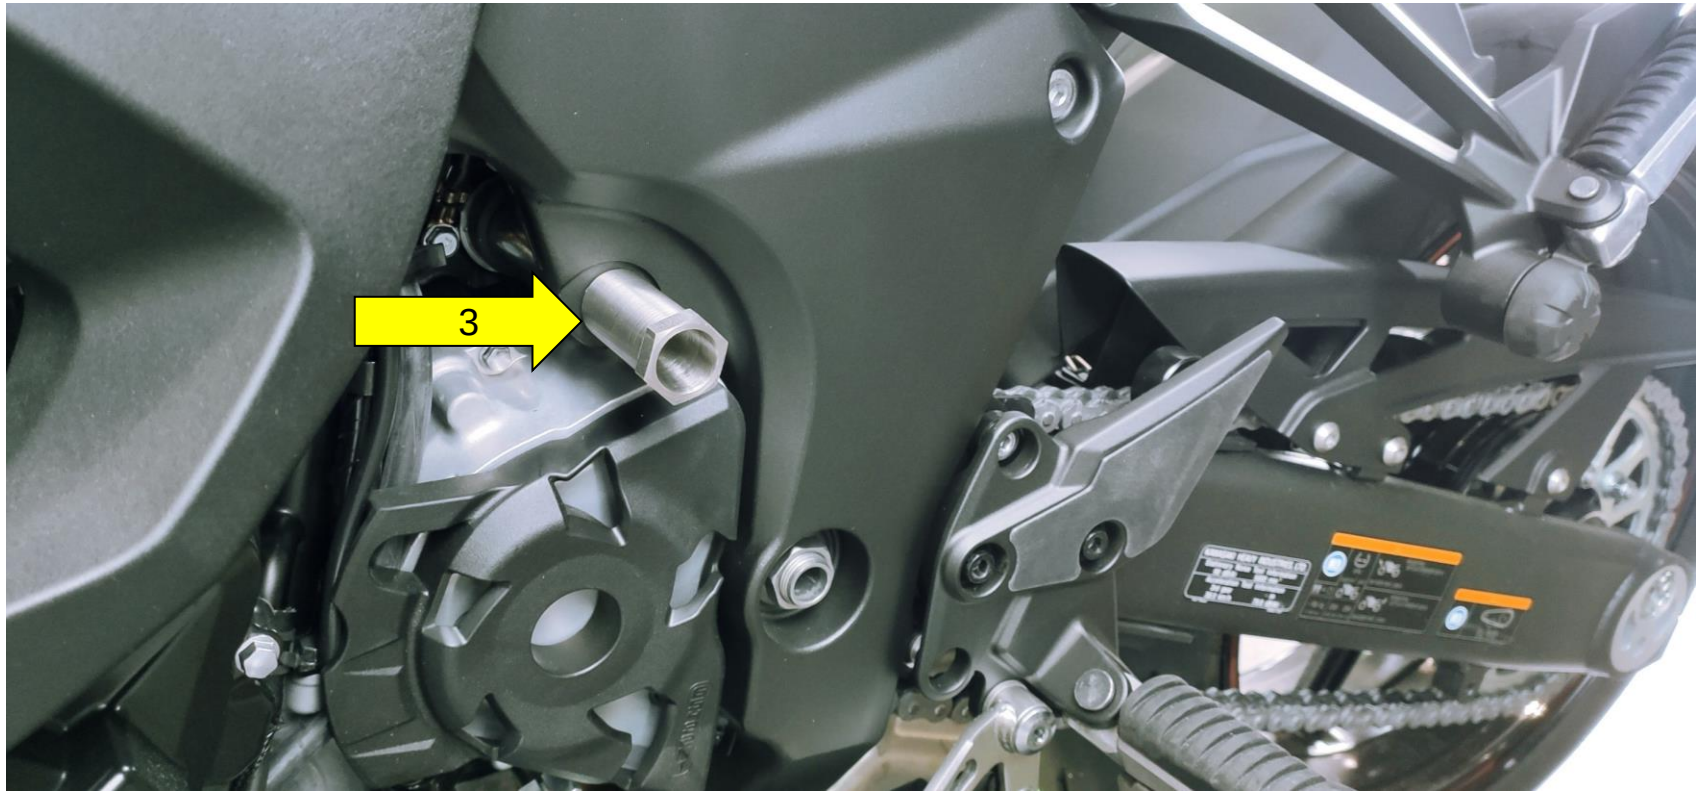

*Bild zeigt anderes Motorrad (Aufnahmepunkte/Prinzip ähnlich)

Die obere Rahmenhülse (3) in den Rahmen einführen und mit der Schraube aus dem vorigen Schritt von der rechten Seite des Motorrads am Rahmen festschrauben.

WICHTIG: Anzugsmoment der Schraube beachten. Das Anzugsmoment finden Sie im Werkstatthandbuch des Herstellers.

Montage Adapterplatte

Adapterplatte vormontieren

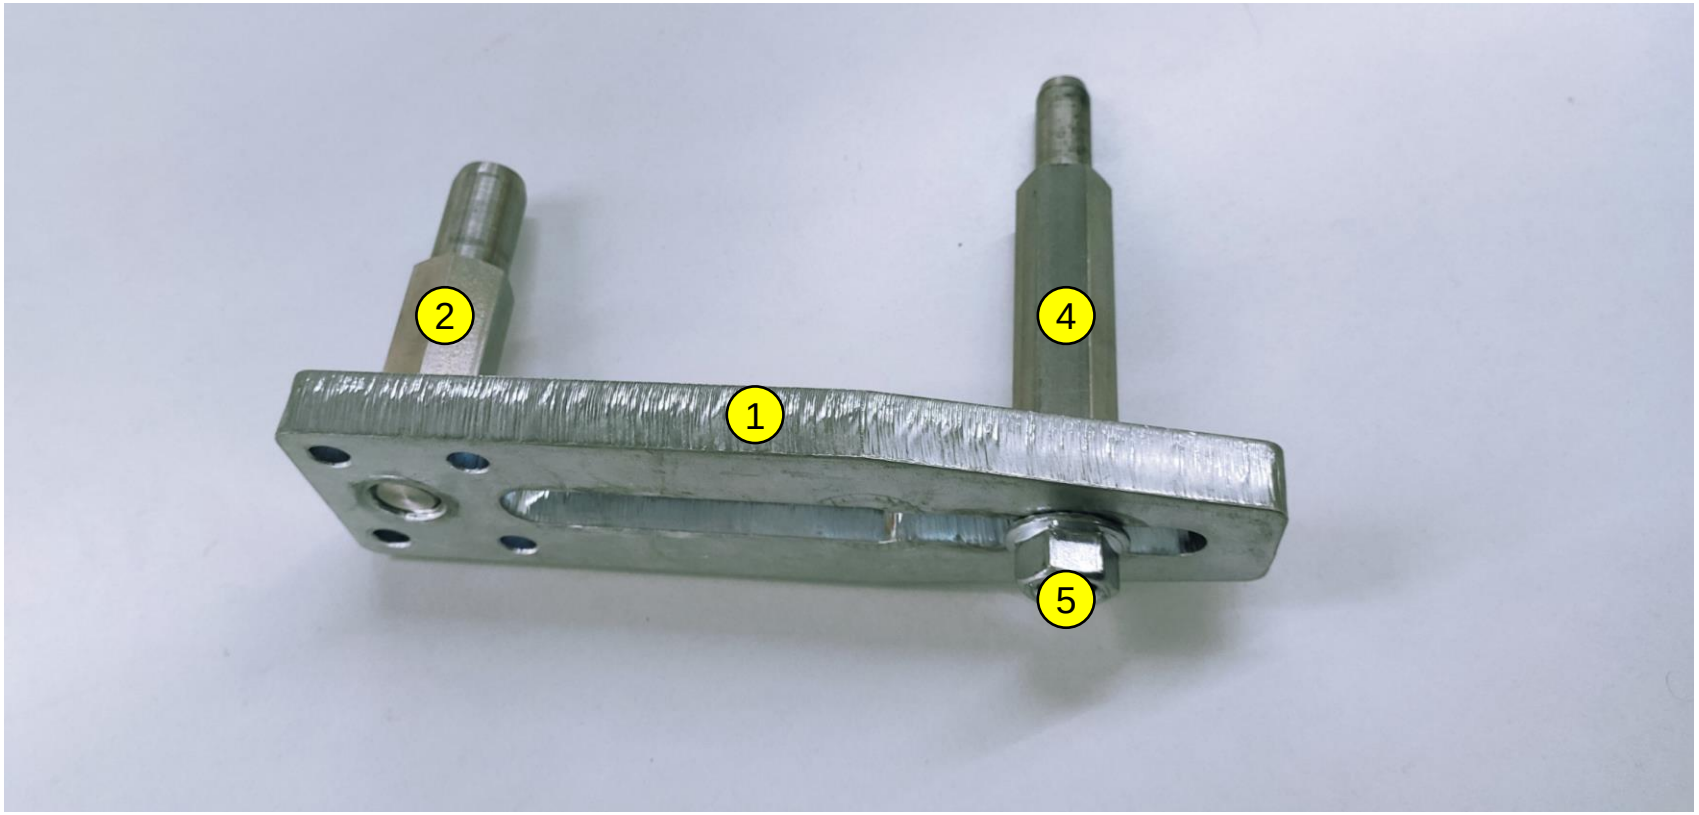

1. Den oberen Pin (2) an der Adapterplatte (1) verschrauben.

2. Den unteren Pin (4) mit der Schnorr-mutter (5) an der Adapterplatte verschrauben, aber nicht festziehen.

Montage Adapterplatte

Adapterplatte fixieren

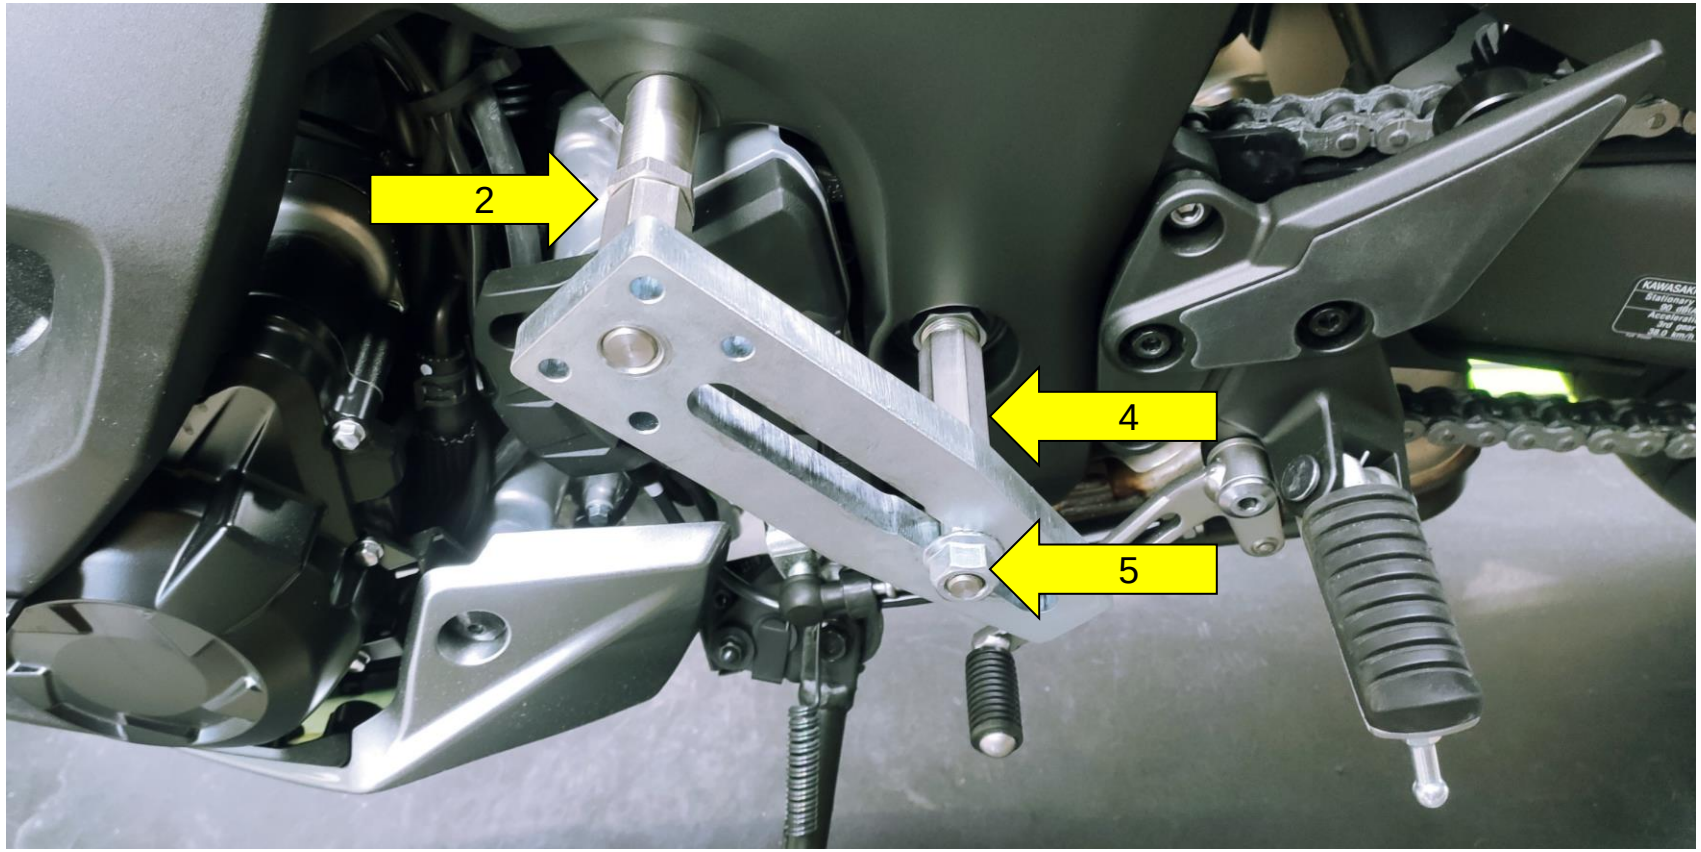

*Bild zeigt anderes Motorrad (Aufnahmepunkte/Prinzip ähnlich)

1. Die Adapterplatte mit dem oberen Pin (2) an das Motorrad stecken und den unteren Pin (4) ausrichten.

2. Den unteren Pin (4) mit der Schnorrmutter (5) festziehen.

Montage Adapterplatte

Adapterplatte am Zentralständer verschrauben

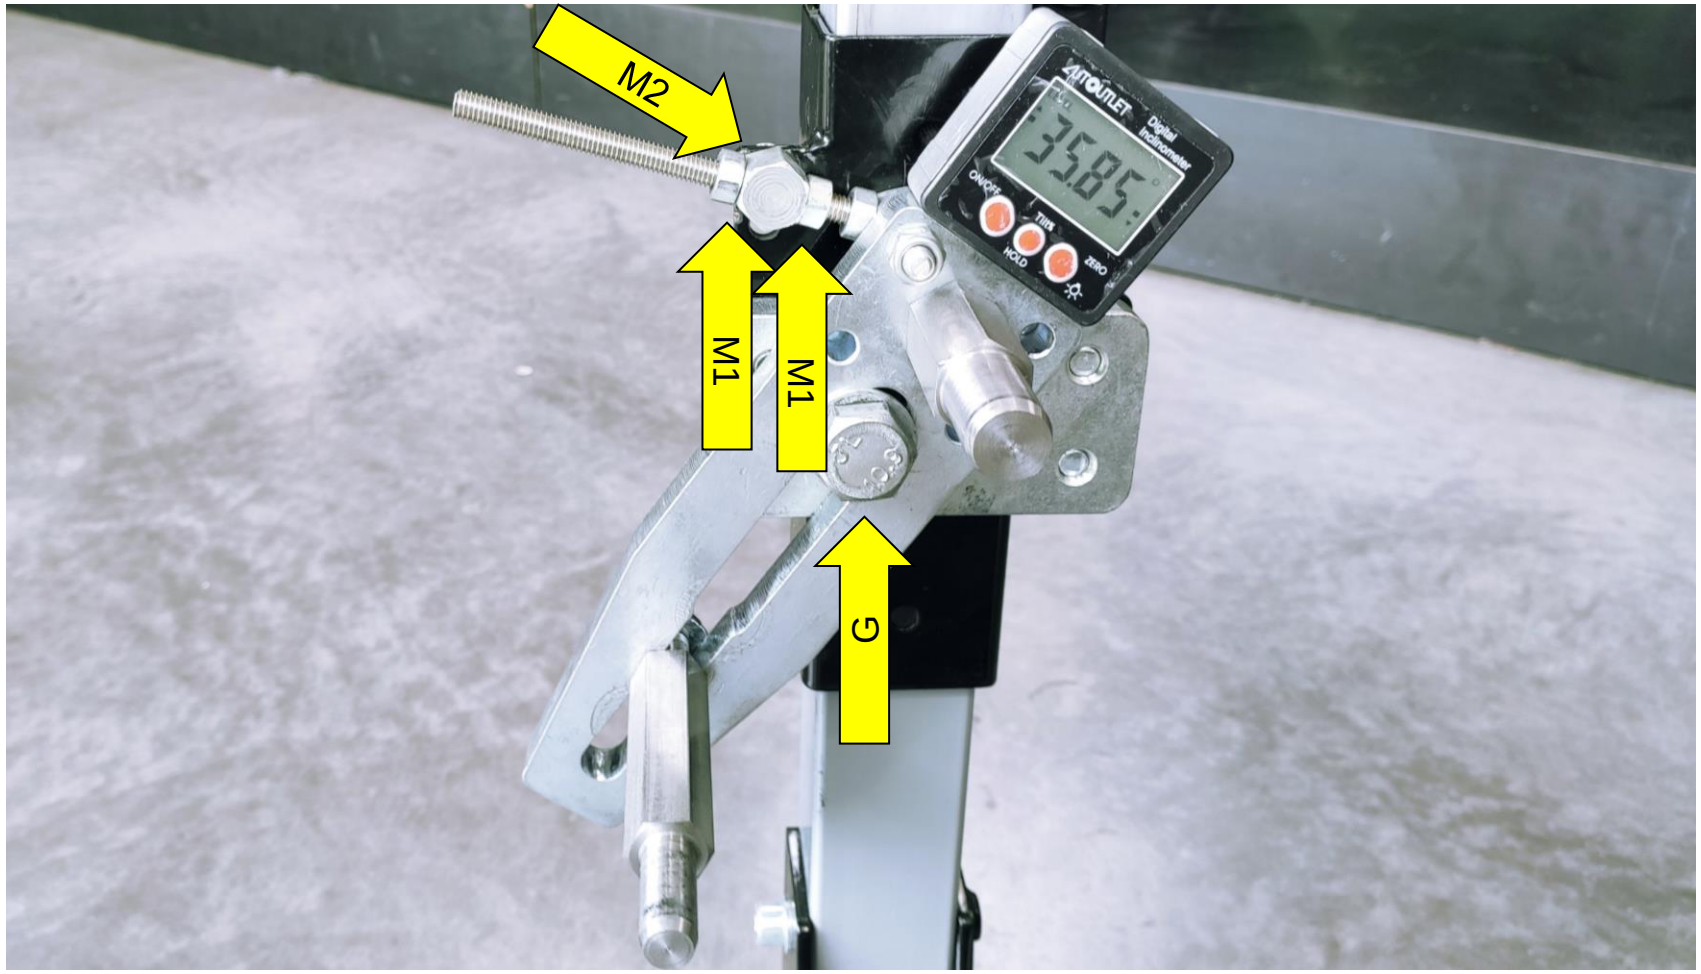

1. Neigungsverstellung (am Zentralständer vormontiert) an der Adapterplatte montieren. Dazu beide Muttern M1 sowie die Mutter auf der Rückseite M2 lösen.

2. Adapterplatte an der Grundplatte G verschrauben, aber nicht anziehen, damit sich die Adapterplatte frei bewegen lässt.

Montage Adapterplatte

Adapterplatte ausrichten (1/3)

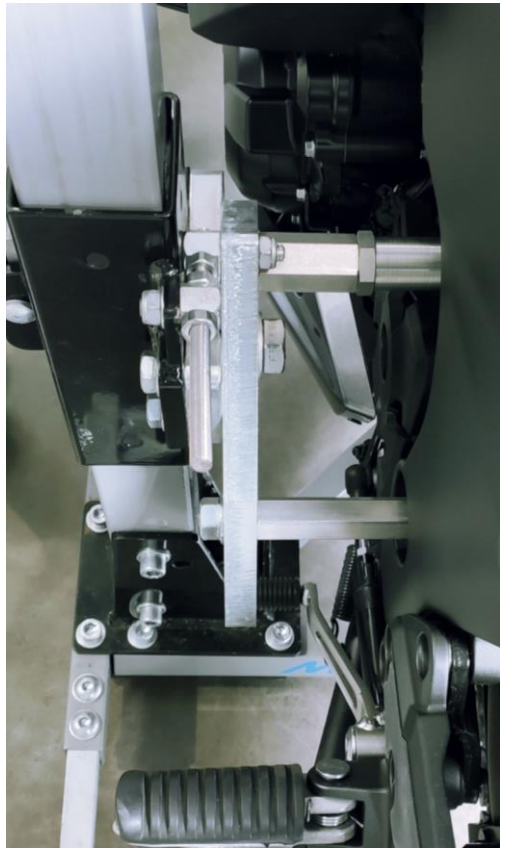

*Bild zeigt anderes Motorrad (Aufnahmepunkte/Prinzip ähnlich)

1. Den Zentralständer neben dem Motorrad und möglichst weit vorne positionieren. Dabei auf Kollision mit der Fußraste und dem Schalthebel achten.

2. Die beiden Pins einführen.

3. Die Adapterplatte an der Grundplatte verschrauben und anziehen (180 Nm).

Montage Adapterplatte

Adapterplatte ausrichten (2/3)

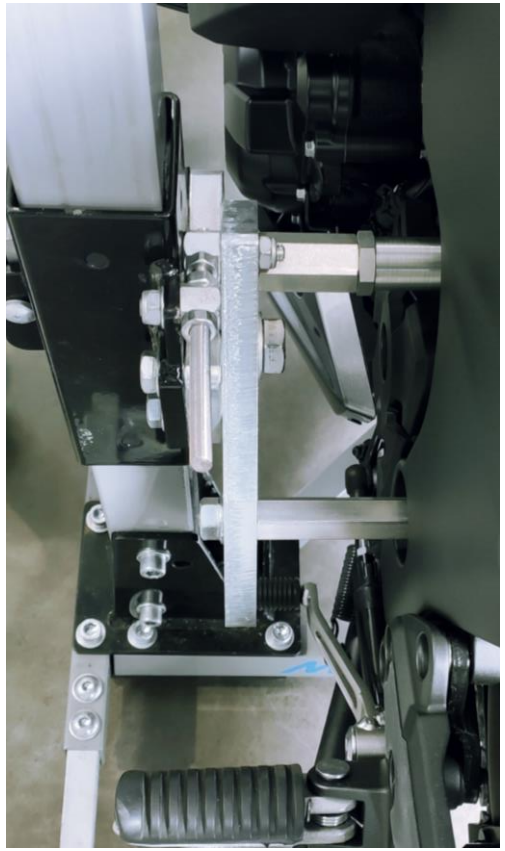

*Bild zeigt anderes Motorrad (Aufnahmepunkte/Prinzip ähnlich)

4. Alle Schrauben an der Neigungsverstellung und an der Adapterplatte anziehen.

WICHTIG:

Bei manchen Modellen wird der Ständer auf den Rollen, welche sich auf dem Boden befinden eingerollt.

Montage Adapterplatte

Adapterplatte ausrichten (3/3)

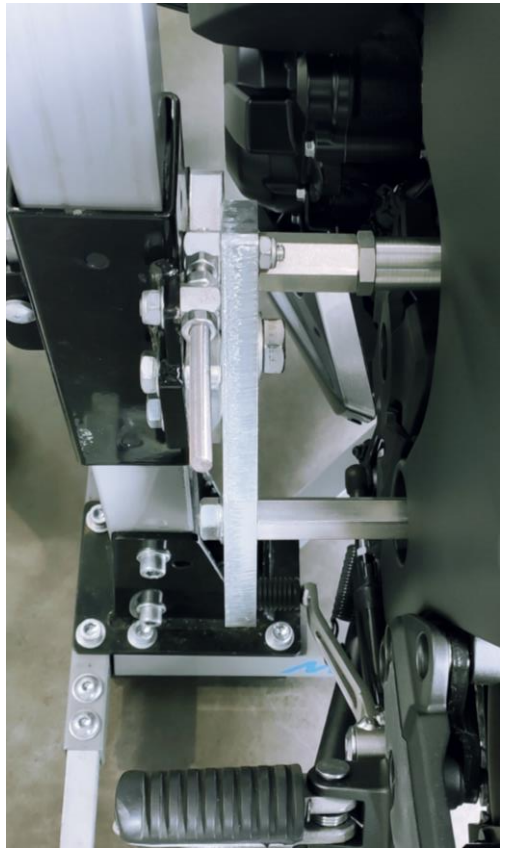

*Bild zeigt anderes Motorrad (Aufnahmepunkte/Prinzip ähnlich)

Bei einigen Modellen ist der Angriffspunkt des Zentralständers sehr dezentral in Richtung Hinterrad orientiert, weshalb das Gewicht des Motorrads nach vorne neigt.

Dies führt dazu, dass der Zentralständer eine größere negative Neigungsvoreinstellung benötigt und deshalb mit der Fußspitze leicht angehoben werden muss.

Hinweise

Erweiterte Grundplatte

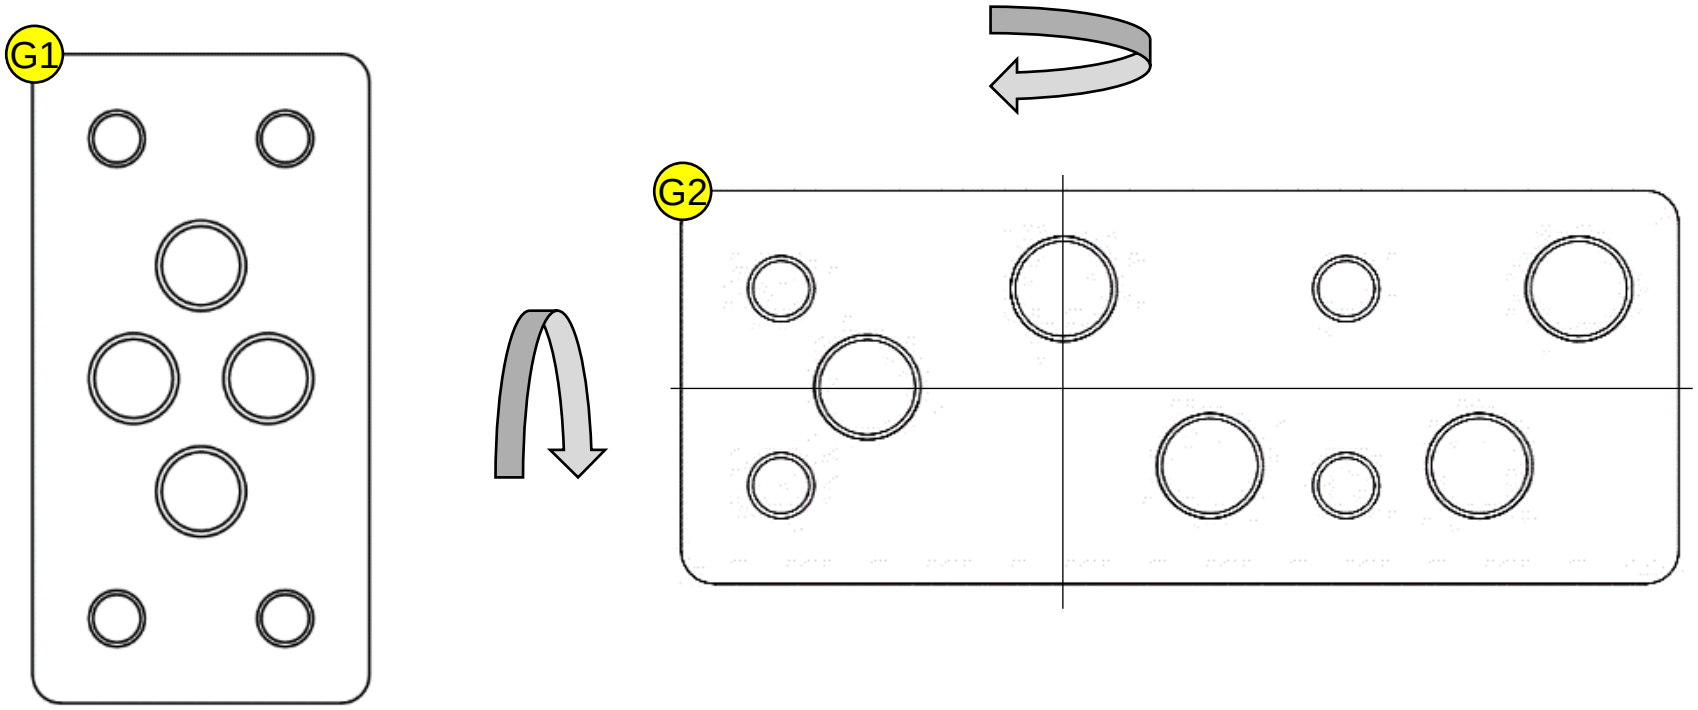

Für eine optimale Ausrichtung der Adapterplatte auf der Grundplatte G1, ist eine erweiterte Grundplatte G2 erhältlich.
Die erweiterte Grundplatte kann jeweils um 180° gedreht werden.

Hinweise

Neigungseinstellung

Damit das Motorrad mit beiden Rädern gleich vom Boden abhebt, muss die Neigung eingestellt werden.

Die Anleitung für die Neigungseinstellung finden Sie auf unserer Homepage.

User manual Adapter plate

KAWASAKI Z 1000 SX/TOURER 2011 - 2013

Scope of delivery

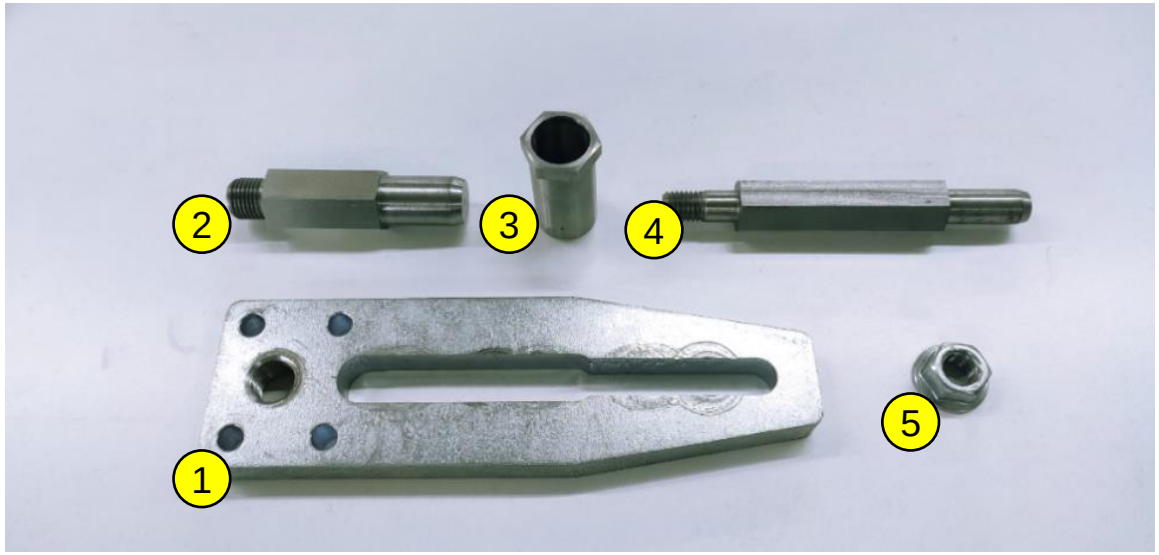

Help:

Lay out all the pieces on a sheet of paper and write the numbers on the sheet.

You will need the numbers to assign the pieces afterwards.

Pos.	Description	Quantity
1	Adapter plate	1
2	Upper pin	1
3	Frame sleeve	1
4	Lower pin	1
5	Cord nut M12	1

Fitting the frame sleeve to the motorcycle

Mounting points on the motorcycle

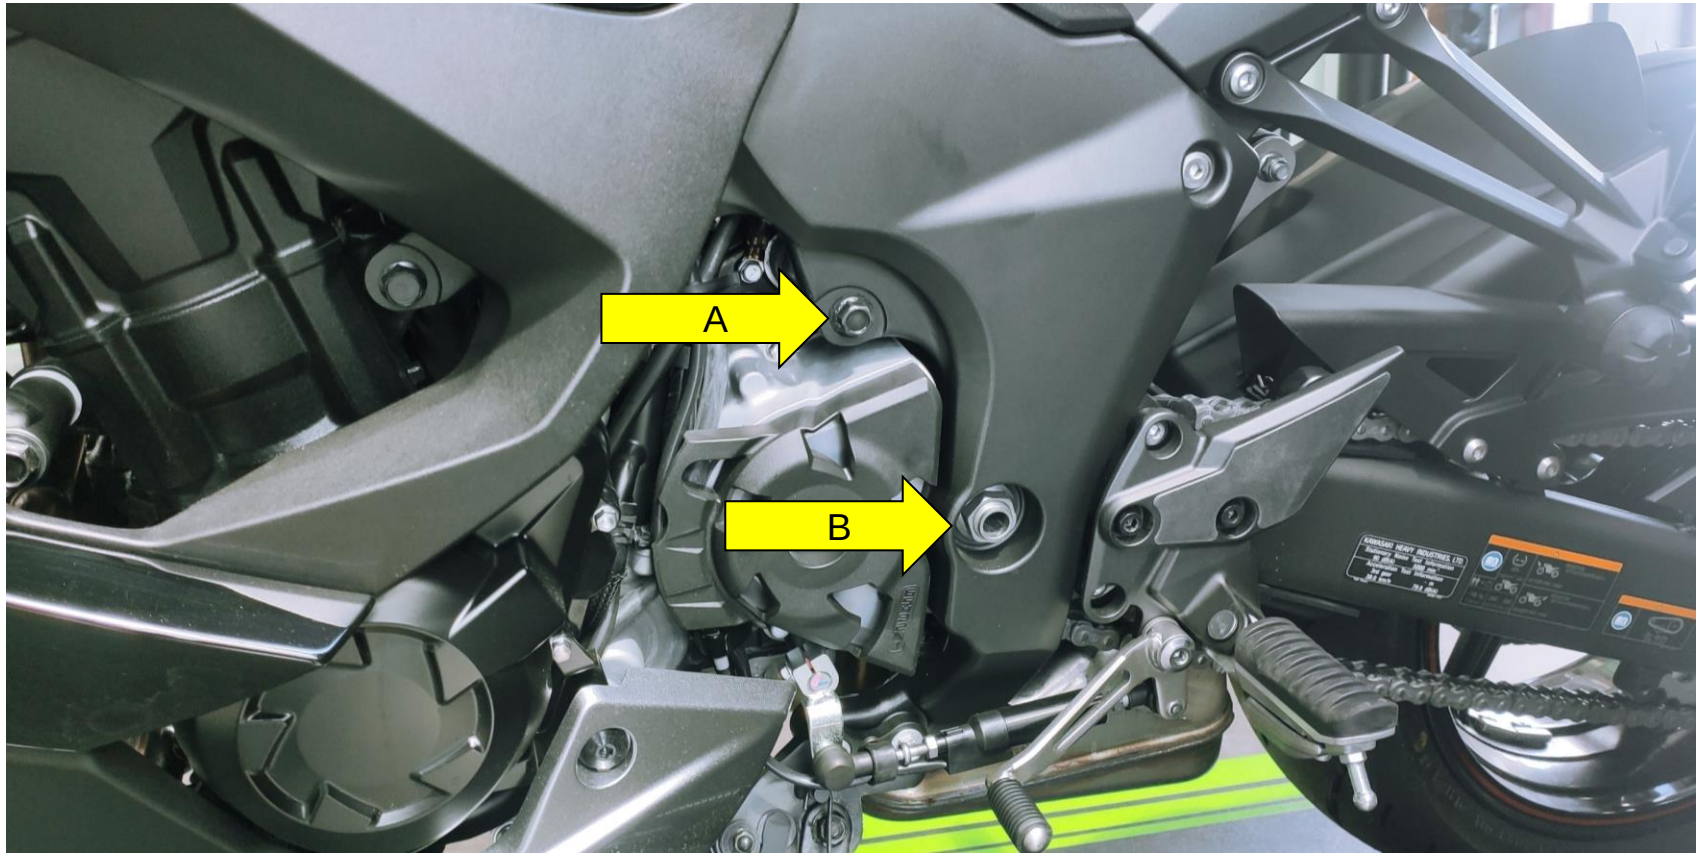

*Image shows a different motorcycle (mounting points/principle similar)

Point A:

The frame sleeve (3) is fitted here.

Point B:

The lower pin (4) engages here.

Fitting the frame sleeve to the motorcycle

Remove the screw from the frame

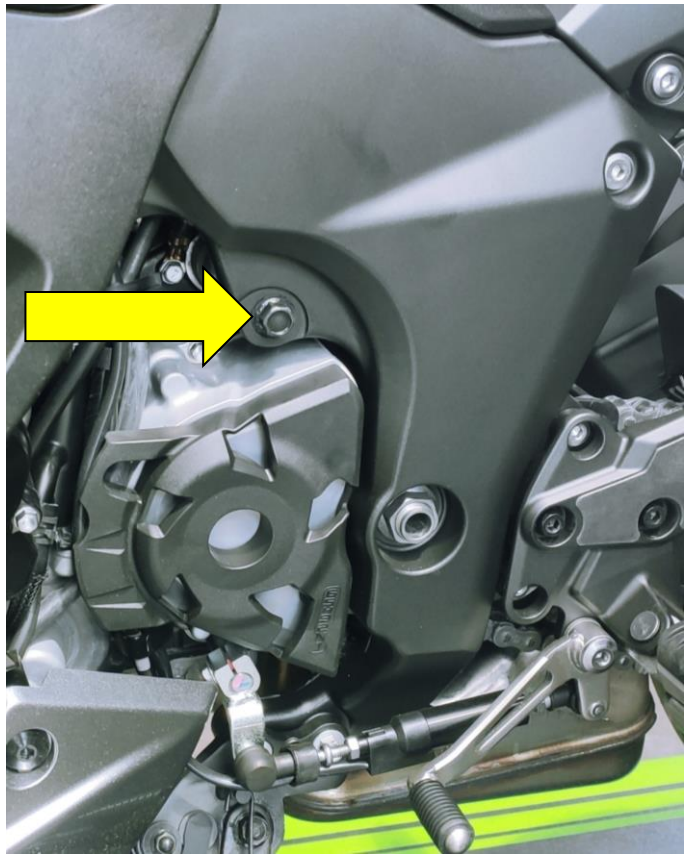

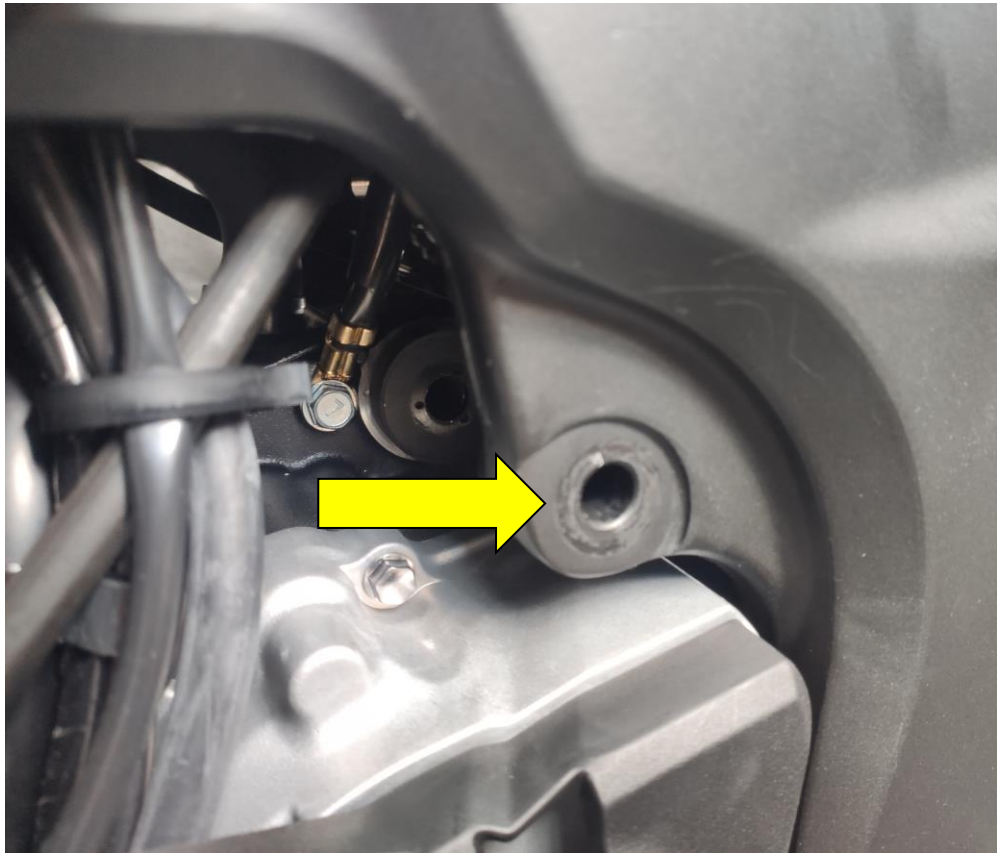

*Image shows a different motorcycle (mounting points/principle similar)

Loosen the nut of the motor bolt and remove it, then the bolt must be turned and inserted into the frame from the other side to secure the frame sleeve.

→The frame sleeve will later replace the removed nut

→Keep the removed nut for reassembly

Fitting the frame sleeve to the motorcycle

Attach the frame sleeve to the motorcycle

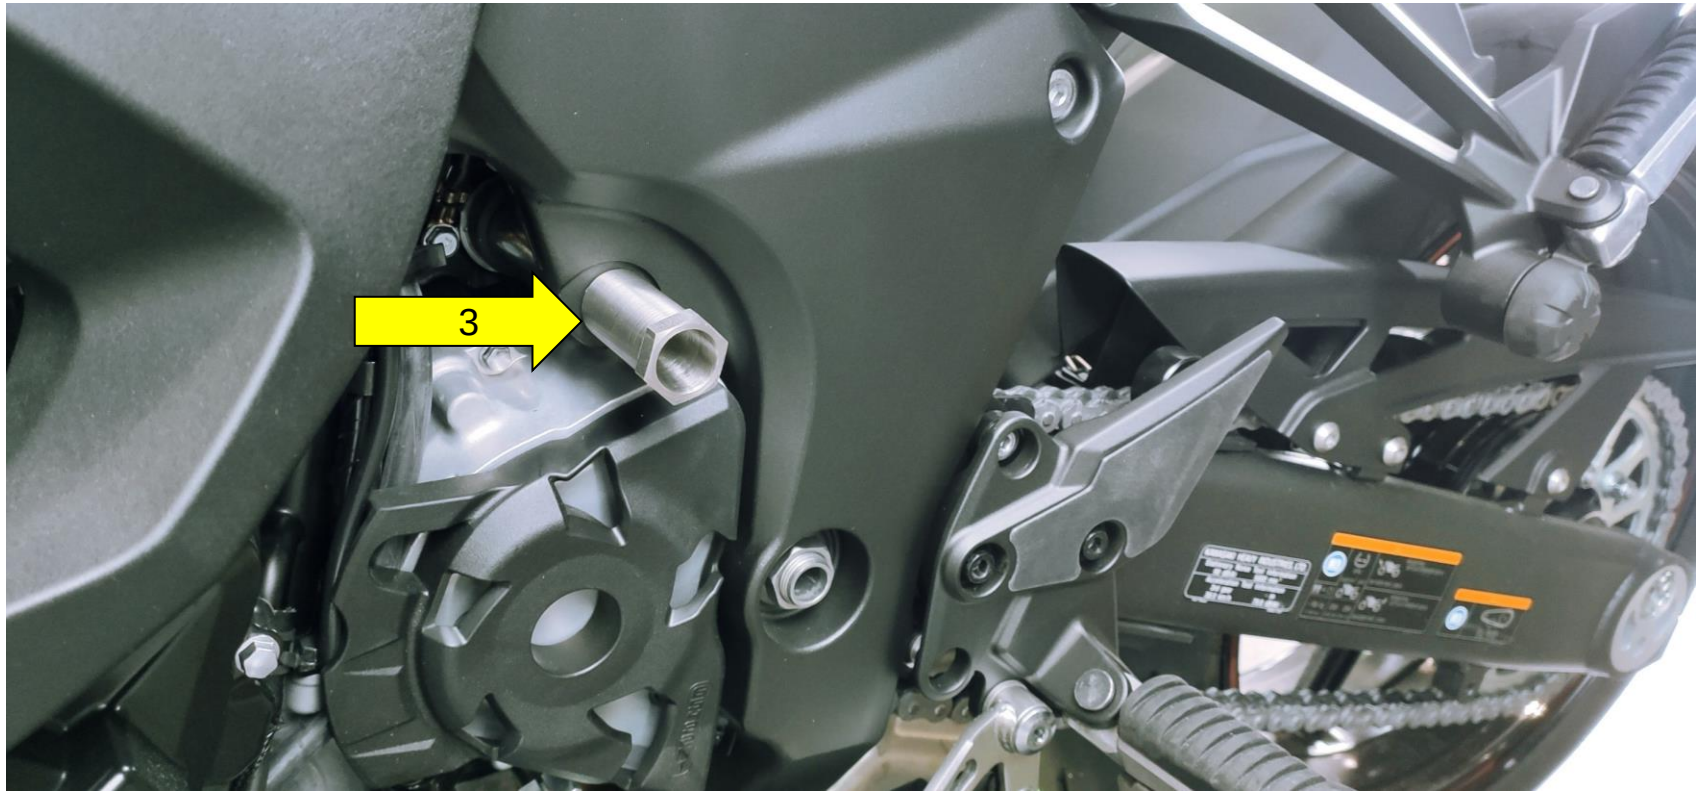

*Image shows a different motorcycle (mounting points/principle similar)

Insert the frame sleeve (3) into the frame and screw it to the frame using the motor bolt from the previous step.

IMPORTANT:

Note the tightening torque of the screw.

The tightening torque can be found in the manufacturer's workshop manual.

Mounting adapter plate

Pre-assemble the adapter plate

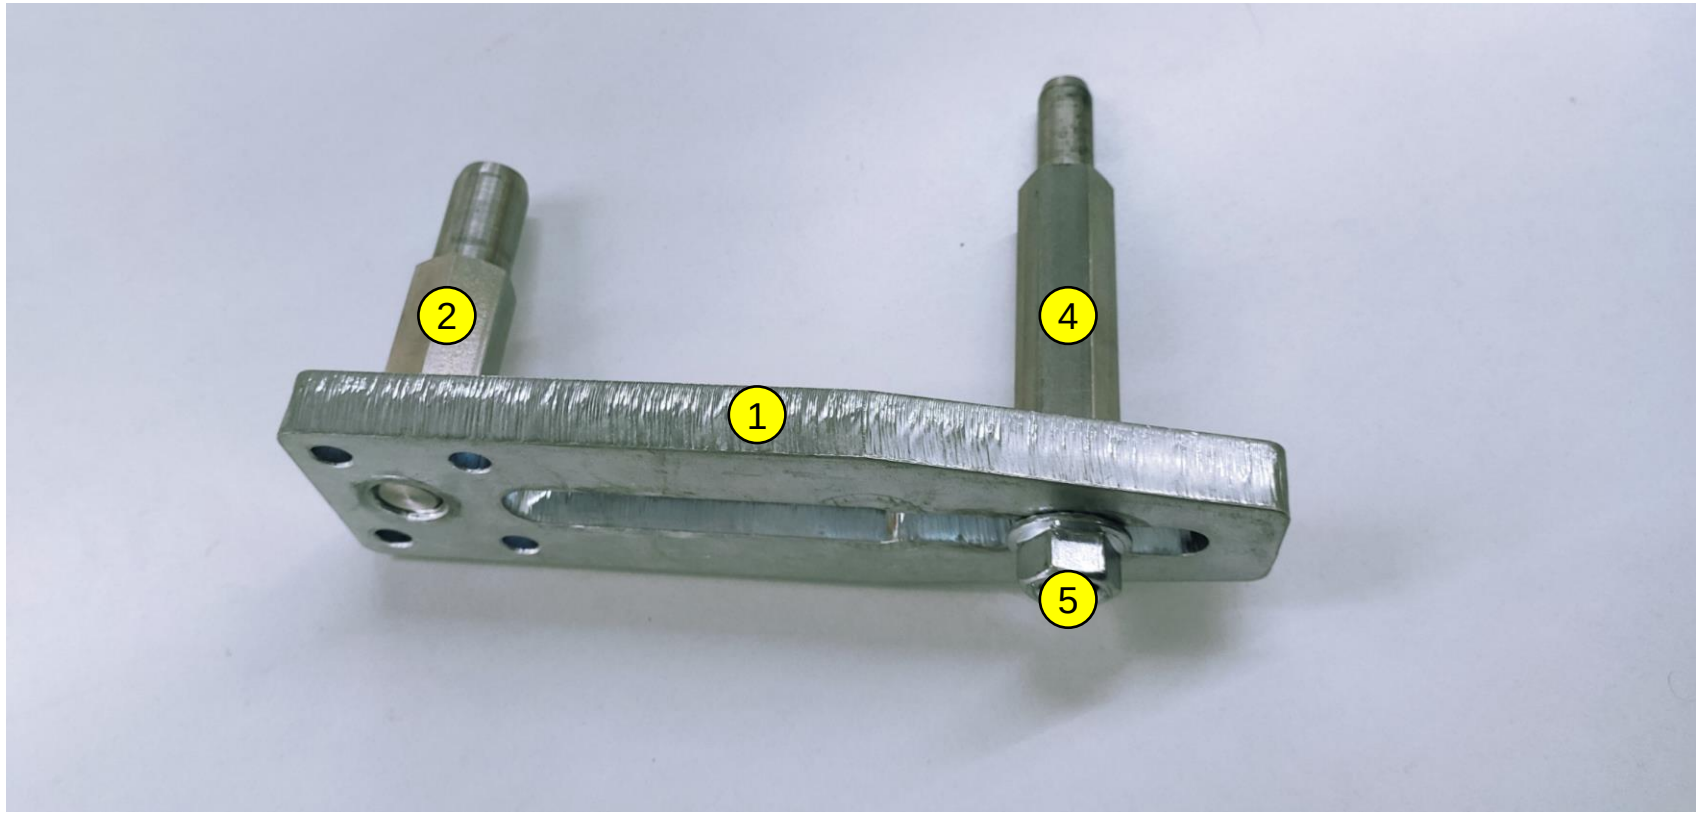

1. Screw the upper pin (2) to the adapter plate (1).

2. Screw the lower pin (4) to the adapter plate using the cord nut (5), but do not tighten it.

Mounting adapter plate

Fix the adapter plate

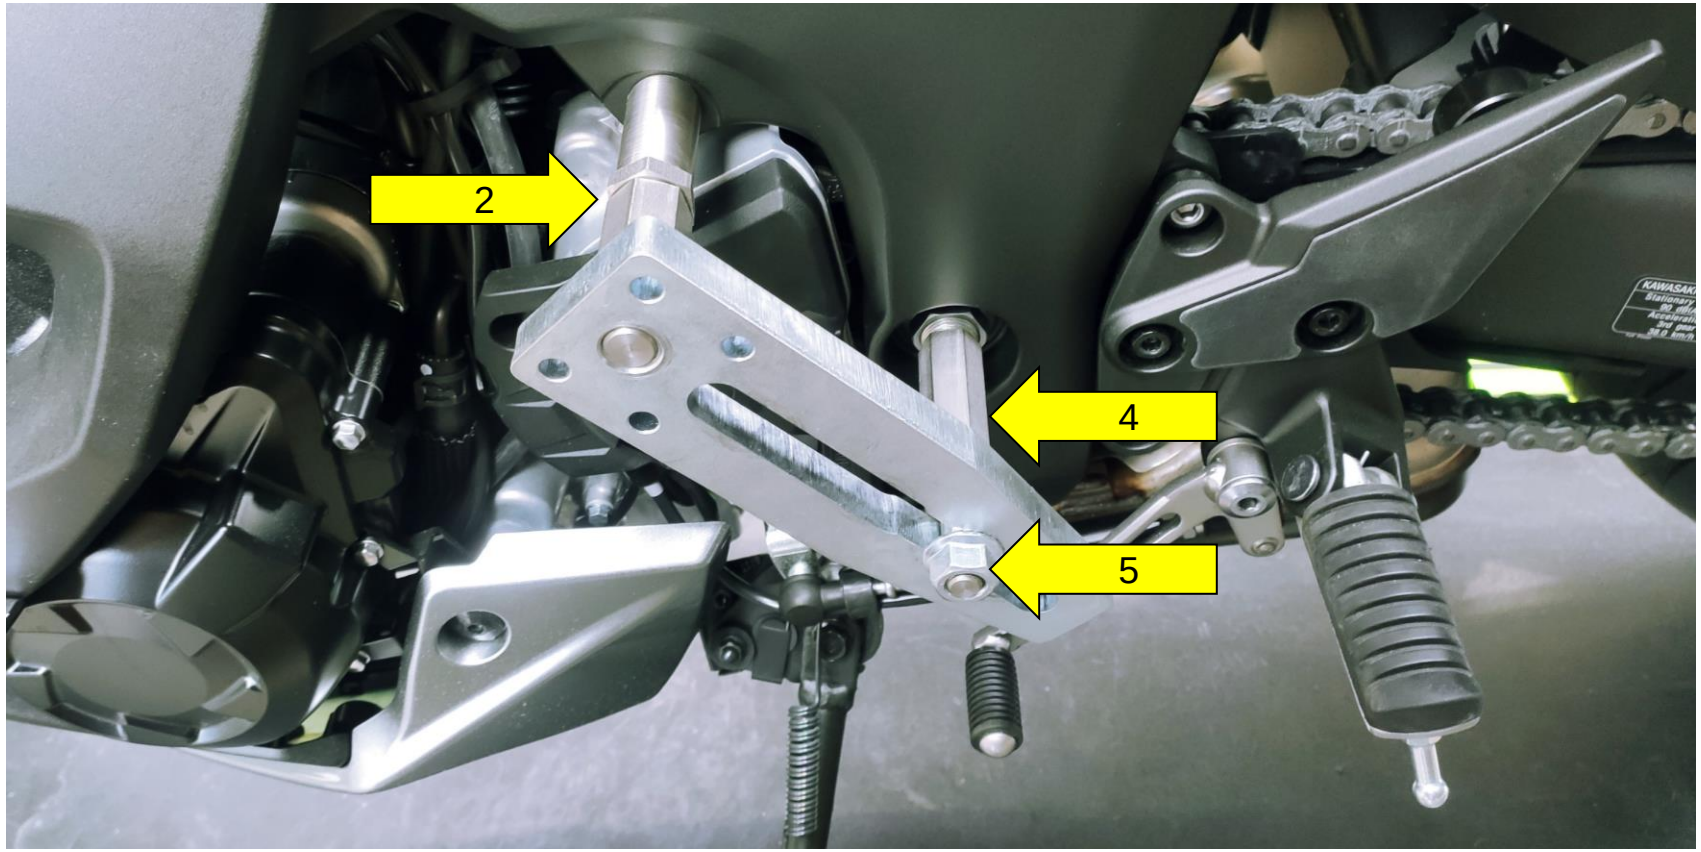

*Image shows a different motorcycle (mounting points/principle similar)

1. Attach the adapter plate to the motorcycle with the upper pin (2) and align the lower pin (4).

2. Tighten the lower pin (4) with the cord nut (5).

Mounting adapter plate

Screw the adapter plate to the center stand

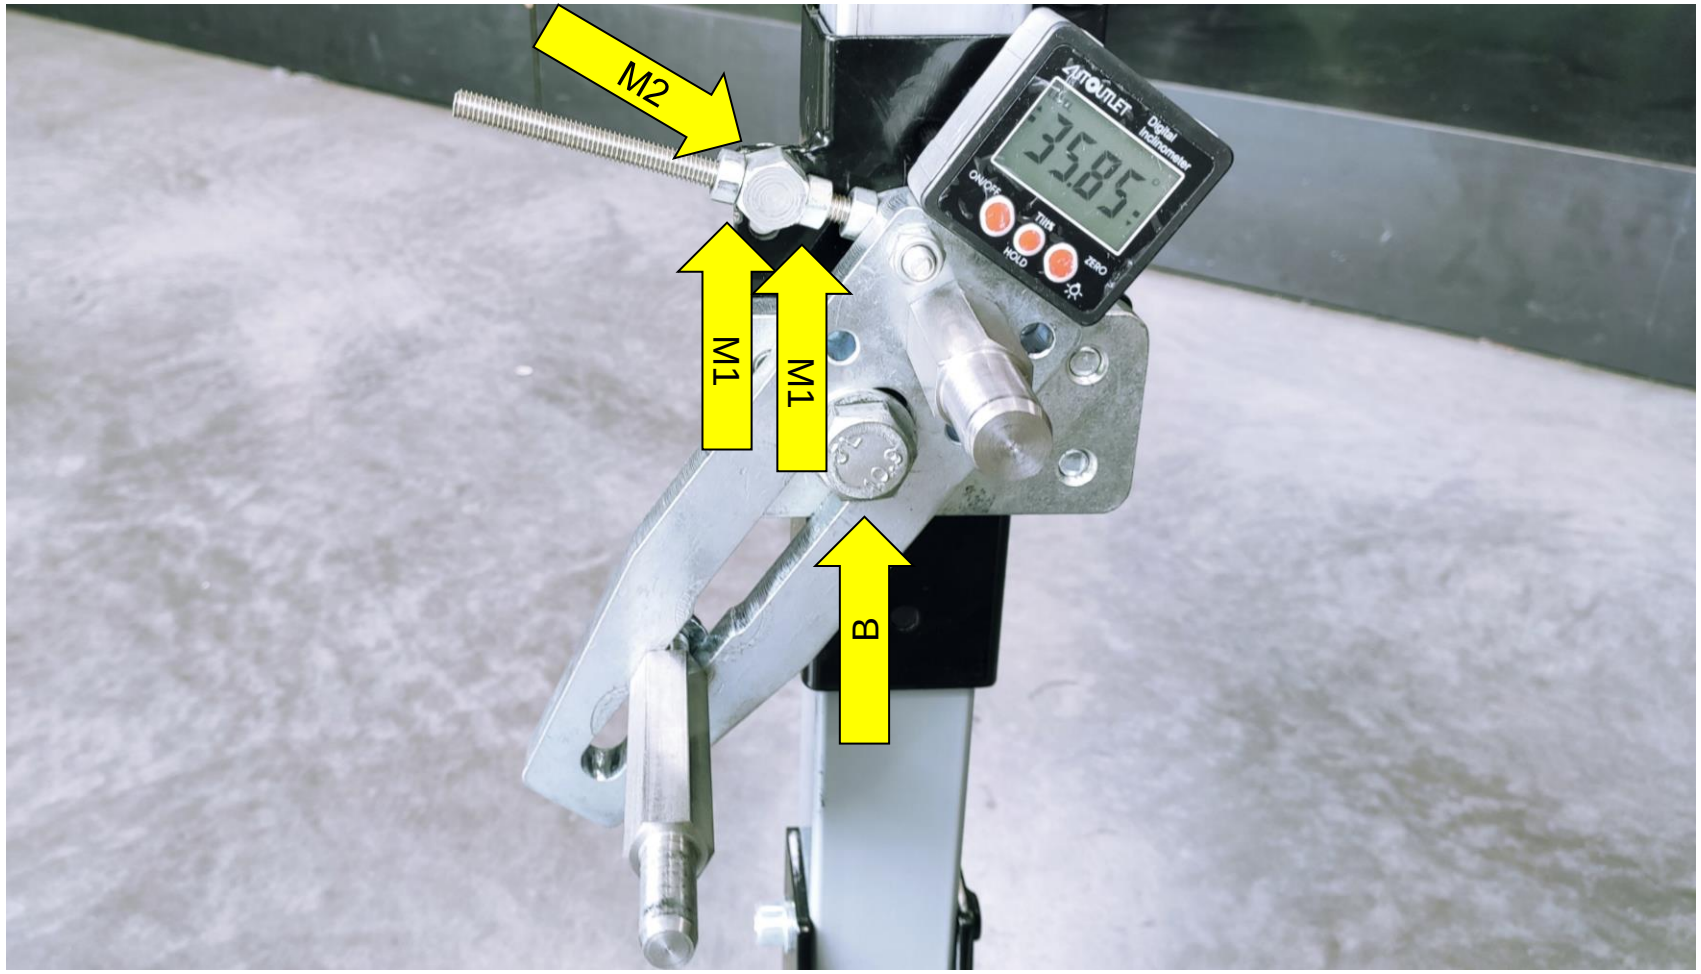

1. Mount the tilt adjustment (pre-assembled on the center stand) on the adapter plate. To do this, loosen both nuts (M1) and the nut on the rear (M2).

2. Screw the adapter plate to the base plate (B), but do not tighten the screws so that the adapter plate can move freely.

Mounting adapter plate

Align the adapter plate (1/3)

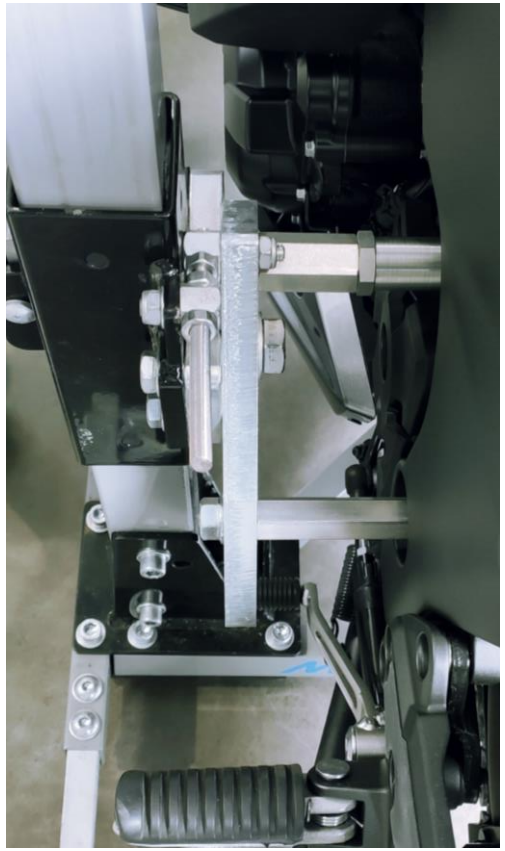

*Image shows a different motorcycle (mounting points/principle similar)

1. Position the center stand next to the motorcycle and as far forward as possible. Watch out for collisions with the footrest and gearshift.

2. Insert the two pins.

3. Screw the adapter plate to the base plate and tighten (180 Nm).

Mounting adapter plate

Align the adapter plate (2/3)

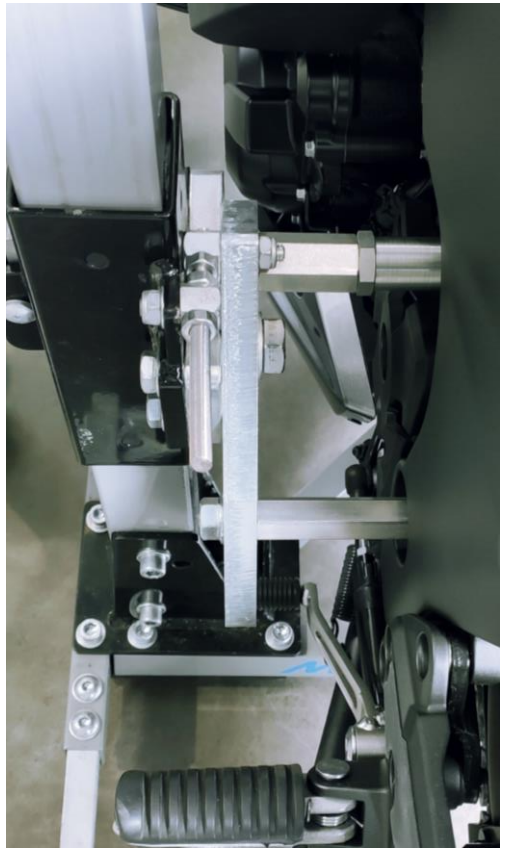

*Image shows a different motorcycle (mounting points/principle similar)

4. Tighten all screws on the tilt adjustment and on the adapter plate.

IMPORTANT:

On some models, the stand is rolled up on the rollers, which are located on the ground.

Mounting adapter plate

Align the adapter plate (3/3)

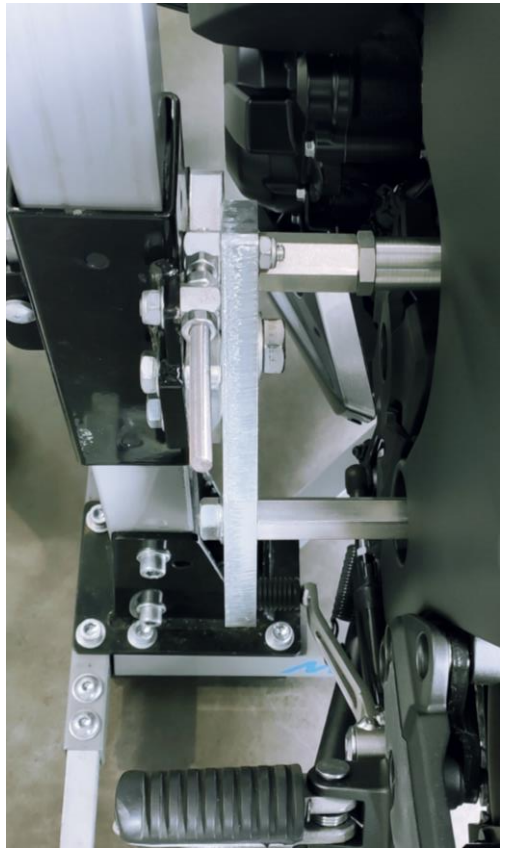

*Image shows a different motorcycle (mounting points/principle similar)

On some models, the point of contact of the center stand is very decentralized towards the rear wheel, which is why the weight of the motorcycle leans forward.

This means that the center stand requires a larger negative tilt presetting and must therefore be lifted slightly with the tip of the foot.

Hints

Extended base plate

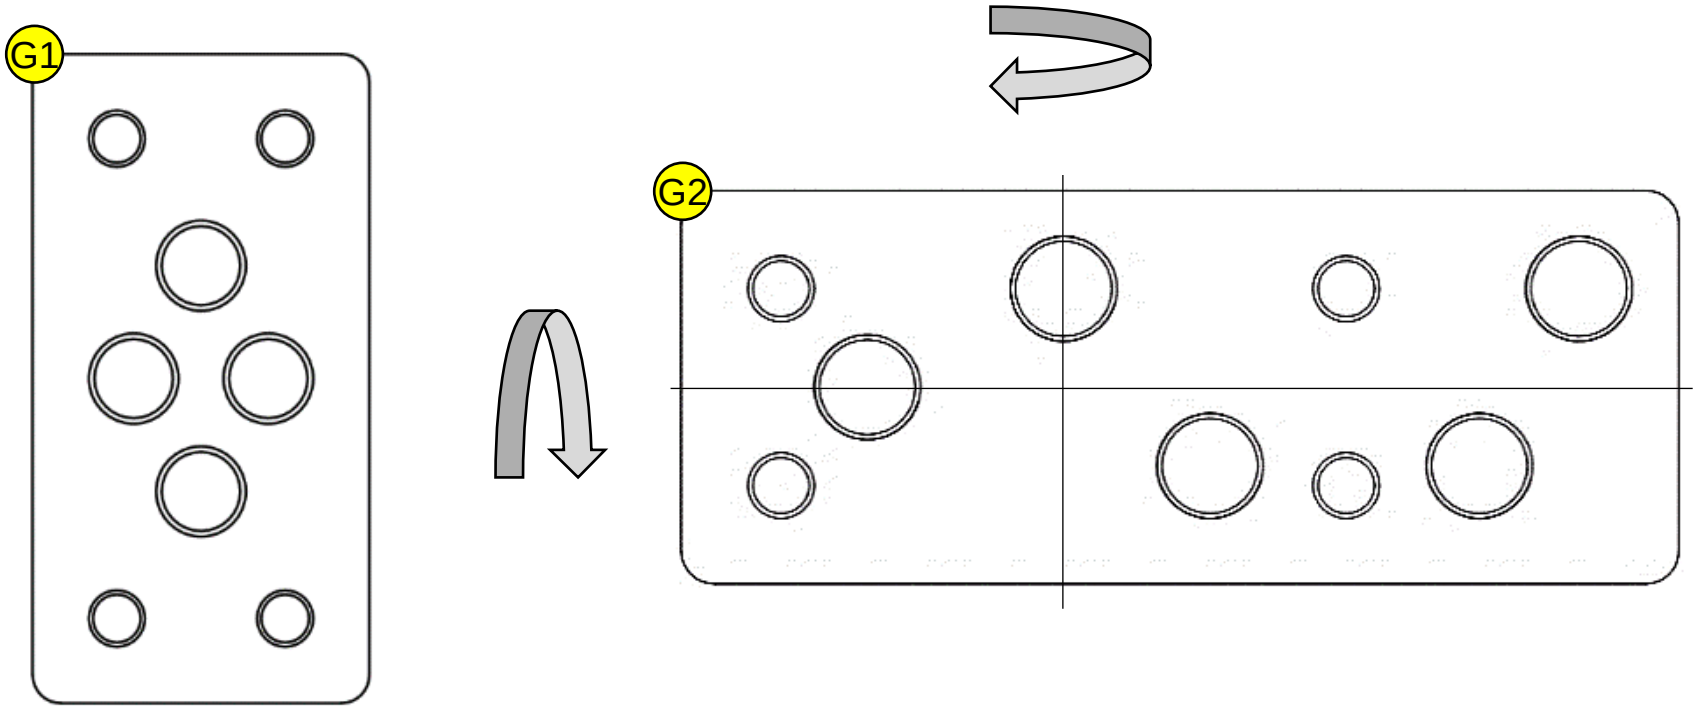

For optimum alignment of the adapter plate on the base plate G1, an extended base plate G2 is available; the extended base plate can be rotated by 180°.

Hints

Tilt adjustment

The tilt must be adjusted so that both wheels lift off the ground at the same time.

The instructions for adjusting the tilt can be found on our homepage.